

groove e

GV-BT1300 Pulse

BLUETOOTH HEADPHONES



USER MANUAL

wireless / AUDIO
PLAYBACK / wired

Pulse
Wireless Headphones
with Premium Sound

 **Bluetooth®**



30 Day Right To Return

*We do not envisage any problems occurring with your groov-e **GV-Tw08 JazzBuds**. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.*



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Extended Warranty

Please register your product within 30 days from date of purchase www.groov-e.co.uk/warranty. Proof of purchase required.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk

“Congratulations on your purchase and **Thank You** for choosing the **groov-e GV-BT1300 Pulse Bluetooth Headphones**
Please read the guide carefully before using”.


CAUTION


- 1.** When not in use for a long period of time please turn off the headphones and store carefully to avoid any damage.
- 2.** In order to prolong the battery life, please charge every 6 months.
- 3.** Please charge the headphones first if it has been left unused for a long time.
- 4.** The battery in the headphones is original and please do not attempt to change it yourself.
- 5.** Please keep the headphones in a dry place.
- 6.** Please keep away from temperatures in excess of 60 C to avoid battery blast accident.
- 7.** Please don't bend or twist the headphones bracket to avoid deformation.
- 8.** Please do not remove the ear-cushions.
- 9.** Do not play at high volumes for long periods at a time. to avoid potential hearing damage.
- 10.** Do not use the headphones in a dangerous place or whilst driving.

OVERVIEW

Box Contents:

- Bluetooth Headphones *1pc
- Micro USB Cable *1pc
- 3.5mm Audio cable *1pc
- User Manual *1pc

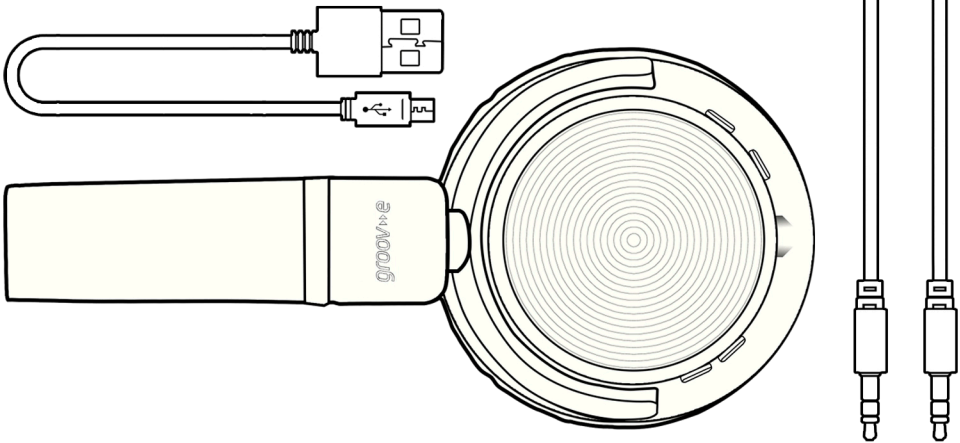

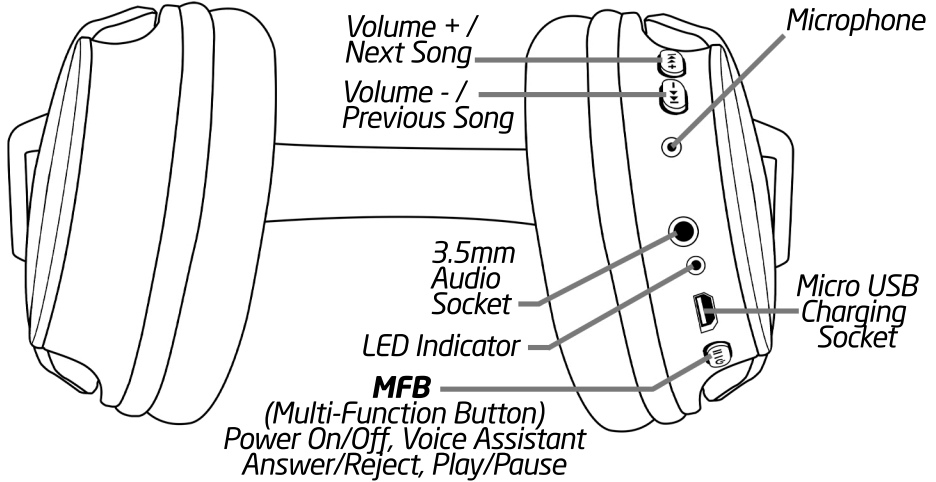

OPERATION

Before using the headphones, you must charge the battery and pair the headphones with a compatible device.

CHARGING

The pack contains a Micro USB cable that can be connected to your computer or other device made for USB charging. Plug the Micro USB end of the included USB cable into the Micro USB port on the right ear cup of the headphones. Plug the other end into a USB port on your computer or other devices made for USB charging. The indicator light will be red while charging. Once fully charged, the indicator light will turn off. Charge time is 3 hours on an empty battery. The fully charged battery has power for up to 10 hours talk/music time (and up to 250 hours standby time).

Note: The headphones have a built-in lithium battery. Please fully charge for at least 4 hours before initial use.

BLUETOOTH ON

To switch on, press and hold the MFB for about 4-5 seconds. The blue LED indicator light is briefly displayed and a prompt tone is heard. The headphones will then go into pairing mode where the indicator light will flash Blue and Red quickly. When the headphones are connected to your device and are ready for use you will hear another prompt tone and the blue LED indicator flashes slowly while connected.

BLUETOOTH OFF

To switch off, press and hold the MFB for about 3 seconds. The red LED indicator light is briefly displayed and you will hear a prompt tone. If the headphones are not connected to a device within 5 minutes, they will switch off automatically.

OPERATION

PAIRING

1. Ensure that your phone or Bluetooth enabled device is switched on.
2. To pair the headphones if they have not been previously paired with a device, switch on the headphones and hold the MFB for 4-5 seconds until the red and blue lights flash.
3. Activate the Bluetooth function on your phone or Bluetooth device and set it to search for available Bluetooth devices.
4. Select "GV-BT1300" from the list of available devices on your phone or Bluetooth device.
5. When successfully connected the blue LED indicator stays illuminated.

Note: If the headphones have been previously paired with another device they will automatically connect with the device if the devices power is on and within connecting range.

ADJUST THE VOLUME

To adjust the volume, press and hold the volume key up or down during a call or while listening to music. You will hear a prompt tone confirming you have reached minimum and maximum volume levels.

APPLICATION

GV-BT1300 can make and receive calls hands-free with your compatible mobile phone and listen to music from a compatible Bluetooth device, but they should be within 10 meters (33 feet) of each other.

CALLS

TO ANSWER A CALL

Short press of the MFB

TO REJECT A CALL

Long press of the MFB

TO END A CALL

Short Press the MFB

VOICE ASSISTANT

Double click the MFB to activate Voice Assistant (This function is based on your mobile device supporting Siri ,Google).

DISCONNECT THE HEADPHONES

To disconnect the headphones from your device, switch off the headphones, or disconnect it in Bluetooth menu of your device.

RECONNECT THE HEADPHONES

To connect the headphones to the phone or Bluetooth device that you have last used it with, switch on the headphones, or make the connection in the Bluetooth menu on your device.

OPERATION

LISTEN TO MUSIC

To listen to music, connect the headphones to a phone or compatible Bluetooth device. The available music functions depends on your Bluetooth device. If you receive or make a call while listening to music, the music is paused until the call ends. To play a song, select a track on your music player and press the MFB on the headphones. To select the next song during playback, press the Next Track button quickly. To select previous track press the Previous Track button quickly.

PASSIVE MODE

You can use the GV-BT1300 as a wired headphone to save batteries. Connect one end of the included audio cable to the bottom of the right ear cup and the other end to your audio players 3.5mm jack.

Note: Inserting the audio cable disables the wireless functionality.

LOW BATTERY WARNING

You will hear a prompt tone every 20 seconds indicating the batteries are low and require recharging

LOW BATTERY POWER OFF

Your headphones will switch off automatically when the battery level reaches minimum.

Specifications:

Bluetooth Version: 5.0

Bluetooth Profiles: HSP, HFP, A2DP and AVRCP

Wireless range: 10M (open area)

Battery: Lithium battery 250 mAh

Music playing time up to 10 hours

Charging time: 3 hours

Standby time: 250 hours

Driver unit: 40mm neodymium

Impedance: 32 ohms

Frequency: 20 Hz - 20K Hz

Sensitivity: 112dB+/-3dB

Microphone

Sensitivity: -40dB + /- 3dB

LED indicator

Features:

40mm drivers for premium sound Bluetooth or Coded - both options for you to enjoy!

10 hours wireless audio playback (Bluetooth)

3.5mm headphone jack for coded audio playback (non-Bluetooth)

Voice assistant enabled

Super Bass

Soft, on-ear cushions for long listening comfort

Folding design for easy storage

Swivel earcups

Rechargeable battery

Built-in Mic for hands-free calls

Micro-USB charging cable (included)

Removable 3.5mm Audio Cable (included)



Bluetooth Connectivity



Wireless Audio Playback



Super Bass



Voice Assistant



Soft Ear-Pads



Hands-Free Microphone



Folding Design



Removable Audio Cable

Battery Removal/Disposal

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk. Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

Never throw batteries into a fire or attempt to open the outer casing. Should your product develop a fault and your battery needs replacing for further advice on how to safely remove your battery please visit our website at www.groov-e.co.uk

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.

Check with you Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

Conditions

- 1)** Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.
- 2)** This guarantee is only valid when the equipment is purchased within the United Kingdom and a valid proof of purchase has been provided.
- 3)** This guarantee excludes:
 - (i)** All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards in a country other than the country of purchase
 - (ii)** Alterations or adjustments made to equipment
 - (iii)** Loss of data resultant from malfunction of hard drive or other storage device
 - (iv)** Damage caused to any third party device as a result of using the product
- 4)** No liability under this guarantee shall be incurred:
 - (i)** In respect of damage or loss occurring during transit to or from the purchaser
 - (ii)** Where the serial number plate of the equipment has been removed or altered in any way.
- 5)** Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.
- 6)** The cost of carriage to and from Groov-e shall be borne by the purchaser.
- 7)** This guarantee is personal to the original purchaser and is not transferable
- 8)** If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at

Please contact the (UK) office for all product enquires

groov»e

Unit J

Braintree Industrial Estate

Braintree Road

Ruislip

Middlesex

HA4 0EJ (UK)

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: +44 (0)20 8839 0978

Authorised EU Representative

Rashmian EU Ltd

Robwyn House

Suite 3E

Corrintra

Castleblayney

Co. Monaghan

Ireland

Register your purchase for extended warranty

www.groov-e.co.uk/warranty