# groov»e **GV-BT1500 Connect**













30 Day Right To Return

We do not envisage any problems occurring with your groov-e GV-BT1500 Connect Wireless Headphones with Detachable Boom Microphone. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



### 12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



**Extended Warranty** 

Please register your product within 30 days from date of purchase **www.groov-e.co.uk/warranty**. Proof of purchase reauired.



# Contact Us

 
Reach out to us at info@groov-e.co.uk or visit www.aroov-e.co.uk "Congratulations on your purchase and Thank You for choosing the groov-e GV-BT1500 Connect Wireless Headphones with Detachable Boom Microphone. Please read the guide carefully before using".


# CAUTION

- **1.** When not in use for a long period of time please turn off the headphones and store carefully to avoid any damage. 2. In order to prolong the battery life, please charge every 6 months.
- 3. Please charge the headphones first if it has been left unused for a long time.
  4. The battery in the headphones is original and please do not attempt to change it
- vourself.
- **5.** Please keep the headphones in a dry place.
- **6.** Please keep away from temperatures in excess of 60 C to avoid battery blast accident.
- 7. Please don't bend or twist the headphones bracket to avoid deformation.
- 8. Please do not remove the ear-cushions.
- **9.** Do not play at high volumes for long periods at a time, to avoid potential hearing damaae.
- **10.** Do not use the headphones in a dangerous place or whilst driving.

# OVERVIEW

Included: Bluetooth Headphones x1Manual x1 TYPE-C USB Charging Cable x1 Detachable Boom Microphone x1




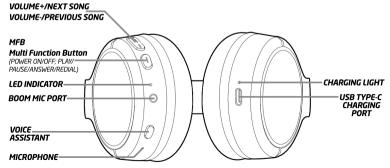


### CHARGE THE BATTERY

The headphones come with a USB TYPE-C cable that can be connected to your computer or other device made for charging.


Plug the TYPE-C USB end of the included USB cable into the TYPE-C USB port under the right ear-cap of the headphones.

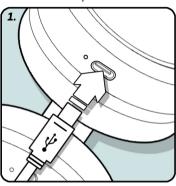


The indicator light will be red while charging.

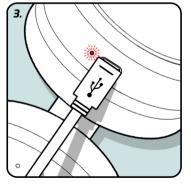

Plug the other end into a USB port on your computer or other devices made for USB charging.

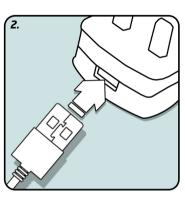


Once fully charged the indicator light will turn off. Charging time is about 2 hours on an empty battery.

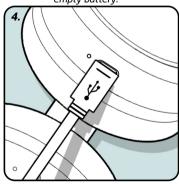


#### SWITCH ON BLUETOOTH

To switch on, press and hold the MFB for about 4 seconds. The headset enters Bluetooth searching mode, and the blue and red indicator light starts to flash alternately.

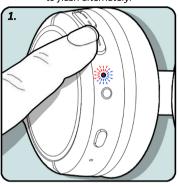

#### SWITCH OFF BLUETOOTH

To switch off, press and hold the MFB for about 4 seconds, the red indicator light goes to solid red then the light goes out.

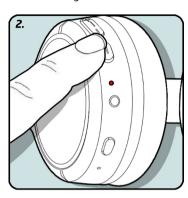


### PAIRING

Ensure that your phone or Bluetooth device you wish to pair is switched on.

To pair the headphones if it has not been previously paired with a device, firstly switch on the headphones using the MFB. The headphones enter pairing mode, the LED indicator light will start to flash blue and red alternately.



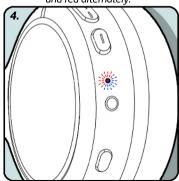

NOTE: To pair the headphones with a new device if it has previously been paired, ensure that the original paired device is switched off.


Ω4

#### PAIRING


Activate the Bluetooth feature on your phone or Bluetooth devices, and set it to search for Bluetooth devices.



When successfully connected, the blue light turns to continuous lighting, while playing music the blue light will flash and when you pause the music the blue light again remains continuous

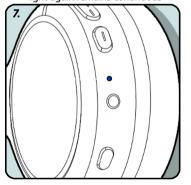

Select "GV-BT1500" from the list of found devices on your phone or Bluetooth devices, Bluetooth is connected once there is the "BEEP" prompt tone

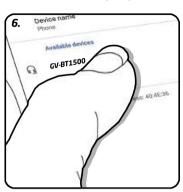


The headphones that have been previously paired with another device will automatically connect with the device if the device is powered on and within connecting range, if not the headset will enter standby mode with a with a flashing red and blue light

"GV-BT1500" can make and receive calls hands-free with your compatible mobile phone and listen to music from a compatible Bluetooth device, but they should be with 10 meters (33 feet) of each other.

The headset is compliant with the Bluetooth Specification 5.1 support the following profiles: Headset Profile (HSP) V1.6, Hands-free Profile (HFP) V1.5, Advanced Audio Distribution Profile (A2DP) V1.0, and Audio Video Remote Control Profile (AVRCP) V1.4 input rating 5V DC, 0.5A


## ADJUSTING THE VOLUME

Turn the volume up or down by a long press on the volume +/- key during a call or while listening to music.

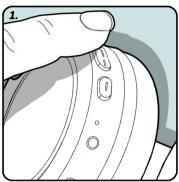

# VOICE ASSISTANT

To use Siri / Google function, short press button to activate the Siri / Google on your phone. This function is based on your phone support Siri / Google

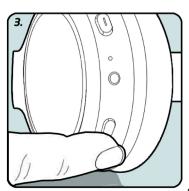


#### CALLS

To make a call, use your mobile phone in the normal way when the headset is connected to it. During an incoming call, quickly press the MFB to answer it, or press and hold about 1.5 seconds to reject the call. During a call, short press MFB to end it. For last number redial Double press the MFB.



#### **BOOM MICROPHONE**

Use the included Omnidirectional Boom Microphone by plugging it into the Boom mic port, using the Omnidirectional Boom Mic will give greater clarity when used during meetings, video conferencing and

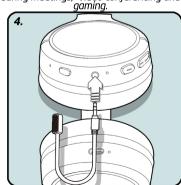

#### LISTEN TO MUSIC

To listen to music, connect the headset to phone or compatible Bluetooth devices that support A2DP Bluetooth profile. The available music functions depend on your Bluetooth devices. If you receive or make a call while listening to music, the music is paused until the call ends.

To play a song: select it in the music player and press the MFB on the headphones.
To pause or resume playing a song: Press the MFB.
To select the next song: During playback, press the volume up button.
To select the previous song: Press the volume down button.
To increase the volume: Press and hold the volume up button.

**To decrease the volume:** Press and hold the volume down button.

# NOTE: A warning tone is heard when the volume reaches maximum level

DISCONNECT THE HEADPHONES

To disconnect the headphones from your device, switch off the headset, or disconnect it in Bluetooth menu of your device.

RECONNECT THE HEADPHONES

To connect the headphones to the phone or Bluetooth devices that you have last used with it, switch on the headset, or make the connection in the Bluetooth menu of vour device.

LOW BATTERY WARNING

At power on condition, when battery voltage is lower than 3.2V, there will be a warning beep every 60 seconds.

POWER OFF AT LOW BATTERY

At power on condition, when battery voltage is lower than 3.0V, the headset will switch off automatically.

SPECIFICATIONS:

Bluetooth Chipset: Version 5.1 Bluetooth Profiles: A2DP, HFP, HSP, AVRCP,

RF Range: 10M (open area) Battery: Lithium battery 180mAh

Music playing time up to 30 hours Charging time: 2 hours Standby time: 150 hours Driver unit: 40mm neodymium

Frequency response: 2.402GHZ~2.480GHZ Sensitivity: 107 +/- 3dB (at 1KHz)

Impedance: 32 ohms Frequency: 20 Hz - 20K Hz

Microphone Sensitivity: -42dB +/-3dB LED Indicator















(included)

FEATURES:

Super bass

Swivel earcups



Voice assistant enabled

 Rechargeable battery Built-in Mic for hands-free calls

Soft, on-ear cushions for long

listening comfort • Folding design for easy storage



40mm drivers for premium soundBluetooth connectivity 30 hours wireless audio playback
 Flexible Omnidirectional Boom

Microphone for clear audio & video calls

Ideal for working from home or office

 Type-C USB charging cable (included) Detachable Boom Microphone





Microphone

Design

Playback Connectivity Microphone

#### BATTERY REMOVAL/DISPOSAL

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

Never throw batteries into a fire or attempt to open the outer casing. Should your product develop a fault and your battery needs replacing for further advice on how to safely remove your battery please visit our website at www.aroov-e.co.uk

#### Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or retailer for recycling advice.



## **GUARANTEE**

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(f) In respect of damage or loss occurring during transit to or from the purchaser (ii) Where the serial number plate of the equipment has been removed or altered in any way.

**5)** Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for nealigence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.
7) This guarantee is personal to the original purchaser and is not transferable.
8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

## **DECLARATION OF CONFORMANCE**

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov» e Unit J Braintree Industrial Estate Braintree Road Ruislip Middlesex HA4 OEJ UK

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Authorised EU Representative

Rashmian EU Ltd Robwyn House Suite 3E Corrintra Castleblayney Co. Monaghan Ireland

Register your purchase for extended warranty **www.groov-e.co.uk/warranty** 

MADE IN CHINA