

groov▶▶e

GV-CM01

Kidz

Digital Camera



Digital Camera
with Frames,
Filters & Games

groov-e.co.uk



30 Day Right To Return

We do not envisage any problems occurring with your groov-e GV-CM01 Kidz Digital Camera. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Extended Warranty

Please register your product within 30 days from date of purchase www.groov-e.co.uk/warranty. Proof of purchase required.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk

“Congratulations on your purchase and Thank You for choosing the groov-e GV-CM01 Kidz Digital Camera. Please read the user guide carefully before using”.

 **Important safety information**

- *Keep the product and all its parts out of reach of children under 3 years of age.*
- *Only use the USB cable that came with the product. Using an unauthorised cable will invalidate your guarantee and may irrecoverably damage the product.*
- *This product has an integral rechargeable battery and should not be disposed of in the normal household waste but taken to an appropriate recycling facility, where and when these are available*
- *Never throw batteries in a fire or attempt to open the outer casing.*
- *This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.*
- *Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.*
- *Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.*
- *Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.*
- *Keep it away from bright sunlight or heat sources, such as a radiator.*
- *Never place any type of candle or naked flame on top of, or near the product.*

 **Caution: Danger of explosion if batteries are incorrectly replaced**

OVERVIEW

IN THE BOX:

- **1 x** Kidz Digital Camera with 600 mAh rechargeable battery
- **1 x** USB Charging/Data Transfer Cable.
- **1 x** Carry Strap
- **1 x** User Manual

FRONT

 
Shutter Button

Take a photo/video
Select an operation

Camera Lens

Speaker

Microphone

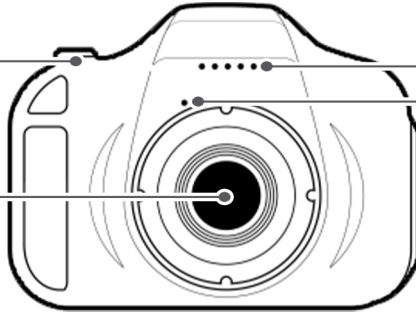

BACK

Loop for carry strap (on side)

Colour HD Display

 
Power On/Off and Back button

Charge status LED

Left

Right

Down

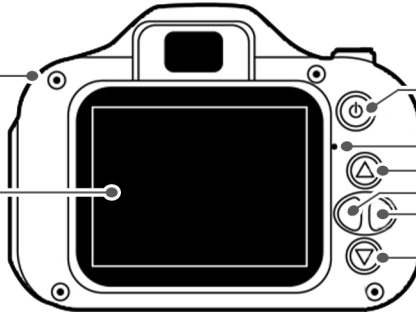


SIDE

Micro USB Charging Socket

Micro SD card slot (Video/MP3)

 
Product Reset Hole

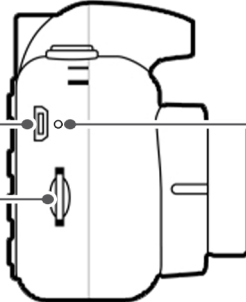


OPERATION

Charge the Integral Camera Battery

Your camera has an integral 600mAH rechargeable battery. Before you use your camera for the first time, we recommend that you fully charge the battery.

1. Connect the Micro USB end of the USB charging cable into the Micro USB socket on the side of the camera. Plug the USB-A end of the charging cable into a computer or other USB charging device.
2. The red battery charging LED on the back of the camera will turn on and the integral battery will begin to charge.
3. When the battery is fully charged the charging LED on the back of the camera will change from red to blue colour. From a full charge, you will be able to use your camera continuously for approximately 2 hours.
4. To check the status of the battery, long press the Power button to turn the Camera on and then Select the Camera icon. In the bottom right hand corner of the display, you can check the battery status icon .






 
Power On/Off and Back Button

Long press the  Power button to turn your Camera On or Off. When the Camera is powered On, you can short press the Power button to go back a step in the display options.

Selecting the Camera Functions

When you turn on your Camera six options will be displayed for you to choose from, Camera, Video, Playback, Settings, Games and Music.






The Camera option will be flashing. You can move to the other options using the Left , Right , Up  and Down  buttons. To select an option, just press the Select  button on the top of the camera. To go back at any time, short press the  button.




OPERATION

Settings

Before you start to use your camera, we recommend that you set the correct time and date and choose your personal settings for the size and resolution of your pictures.

To set the time and date, which will appear as a time and date stamp on your photos:

1. Select the  Settings icon. Use the  Up button to scroll to 'Date Time...' and press the  Select button.

2. Use the  Up and  Down buttons to display the correct year and press the  Select button.

3. Use the  Up and  Down button to display the correct month and press the  Select button.

4. Use the  Up and  Down button to display the correct day and press the  Select button.

5. Use the  Up and  Down button to display the correct hour in 24 hour clock and press the  Select button.

6. Use the  Up and  Down button to display the correct minutes and press the Select button. The time is now set.

You can now use the  Up,  Down,  Select and  Back button to select your personal settings for your camera. The other setting options available are:

- Size (Photo): 40M/20M/18M/16M/12M/8M/5M/3M/2M
- Capture timer (Seconds): Off/2S/5S/10S
- Resolution (Video): 1080P/720P/VGA
- Time Stamp: Off/On
- Language: 12 options available.
- LCD Off (Display): Off/1 Min./2 Min./3 Min.
- Auto Off (Camera): Off/3 Min./5 Min.
- Volume (Button press and MP3): 0, 1, 2, 3, 4, 5, 6, 7.
- Format (Micro SD Card): Cancel/Execute
- Sys. Reset (Camera Software): Cancel/Execute
- Version (Software): The software version of the Camera is displayed.

Press the  button to go back to the main options display.

OPERATION

Using the Camera

Your Camera has a 40 Megapixel lens and a 4X Digital Zoom, as well as 28 different Photo Frames to choose from, 10 Special Effects Filters, 6 Colour Filters and Automatic Face Detection.

Up to 50 photos can be stored on your Camera but you can also use a 4GB-32GB Micro SD card (not supplied) to store your photos and enable you to view them on other devices.



Note: If you use a Micro SD card (not supplied), all of your photos will be automatically stored to the card and not to the Camera memory. You may need to format your Micro SD card in the Camera settings.

1. Select the  Camera icon and frame your photo using the Colour Display on the back of the Camera. Press the  Select button to take your photo.

If you have set a 'Capture Timer' in the Camera settings, then a clock icon will appear in the top of the display and there will be a countdown on the display until the photo is taken.


Picture Frames and Special Effects

2. Use the  Up or  Down button to move through the different photo frame options, special effects and colour filters.

3. Use the  Left or  Right button to change the effect of the distorting mirror.

Zoom

Your Camera has a 4X Zoom Lens.

1. Press and hold the  Up button to zoom in. Check the bottom right of the display which will confirm the current zoom setting. 1.0 is the standard setting and 4.0 is the maximum zoom setting.

2. Press and hold the  Down button to zoom out.


3. Press the  button to go back to the main options display.


OPERATION

Using the Video


You will need to use a 4GB-32GB Micro SD card (not supplied) to record your videos. There are 3 different video resolution settings available (1080P/720P/VGA) for you to choose from in the Camera settings and your Camera records using a standard .avi format.

1. Insert your Micro SD card into your Camera with the connections on the card towards the back of the Camera. Check that it is pushed fully into the Micro SD card slot, you will feel it lock into place so that it cannot fall out.

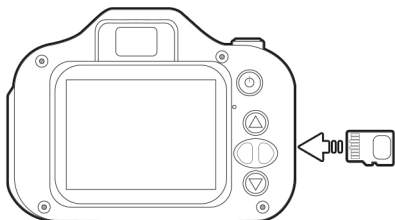


2. Select the  Video icon. The current resolution setting (1080P/720P/VGA) can be seen at the top of the display.


3. Press the  Select button to start your Video recording, a counter will appear in the top right of the display together with a flashing red dot to confirm recording. Press the  Select button again to stop your recording. Press the  button to go back to the main options display.

4. You can watch your video using the Camera  Playback function or you can remove your Micro SD card from the Camera and watch your video on another Micro SD card compatible device. Press the Micro SD card in and then release, you can now remove your Micro SD card.

Playback

Select  Playback to view your Photos or Videos. Your Camera will always give priority to Photos and Videos saved onto a Micro SD card (if fitted).

1. Use the  Left or  Right button to move through your stored Photos and Videos.

2. Press the  Select button to Play/Pause.


3. Press the  Up button to delete single images or videos and press the  Down button to delete all.

4. Press the  button to go back to the main options display.

OPERATION

Connect to a Computer


You can also connect your Camera to a computer to view or copy your Photos and Videos from the Micro SD card using the USB cable provided.

1. Long press  the button to turn your Camera on and check that the Micro SD card is fitted.
2. Plug the Micro USB end of the cable to your Camera and the USB-A end of the cable to a computer.
3. The display on the back of your Camera will show the USB symbol together with a computer and your computer will open in the Micro SD card window. If this doesn't happen automatically, then check for your Micro SD card name in the File explorer and click to open it.
4. You can now view or copy the Photos or Videos on your Micro SD card onto your computer.




Using MP3

You will need to use a 4GB-32GB Micro SD card (not supplied) to play your MP3 files.

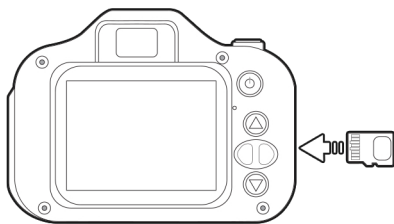1. Insert your Micro SD card into your Camera with the connections on the card towards the back of the Camera. Check that it is pushed fully into the Micro SD card slot, you will feel it lock into place so that it cannot fall out.



 2. Select the  Music icon. Your first MP3 Music file will begin to play.










3. You can now use the  Select button to Play/Pause and the  Left and  Right buttons to skip back or skip forward through your MP3 music files. Press the  button to go back to the main options display.

Note: You can change the volume level of your MP3 files within  Settings, Volume.

OPERATION

Games

Your Camera includes 5 games, Snake, Push the Box, Maze, Aircraft and Numbers Superimposition.

- 1.** Select the  Games icon and use the  Left and  Right buttons to scroll through the games.
- 2.** Press the  Select button to choose your game.
- 3.** Use the  Up,  Down, Left  and  Right buttons as appropriate for each game.
- 4.** Press  the button to exit a game and then press again to go back to the main options display.

TROUBLESHOOTING

NO CARD is displayed when using Video or Selecting Music

- You will need to use a 4GB-32GB Micro SD Card (not supplied) to record Videos and play MP3 Music files with your camera.
- Check that the Micro SD card has been pushed fully into the Micro SD card slot and is locked into place.
- Your Micro SD card may need to be formatted. Select 'Format' within Settings, when your Micro SD card is in the Camera .

The Time and Date Stamp on my Photos and Videos is not Correct

- You can set the correct time and date within Settings, select 'Date Time..'

The Display on my Camera Turns Off but the Camera is On

- The automatic display power off feature saves the battery. You can change the setting or turn this feature off within Settings, select 'LCD Off'.

My Camera Turns Off

- The automatic Camera power off feature saves the battery. You can change the setting or turn this feature off within Settings, select 'Auto Off'.
- The integral battery in the Camera may need to be charged. Connect the USB charging cable and charge your Camera until the Red Charging LED turns Blue.

Factory Reset

- If you are experiencing some problems with your camera, you may be able to resolve them by carrying out a Factory Reset. Use a paper clip and press into the Reset hole near to the Micro USB charging socket to reset the product software.

SPECIFICATIONS

Features:

2 inch Colour HD Screen

40 Megapixel lens

1080P HD video (requires Micro-SD card)

4X Digital zoom

Built-in memory: 50 photos

External memory: Micro-SD 4GB-32GB (optional, not included)

Games: 5

Photo frames: 28

Colour filters: 6

Special effects filters: 10

MP3 playback (requires Micro-SD card)

600mAh Rechargeable battery

Usage time: approx 2 hours

Charging time: approx 2 hours

Wrist Lanyard (included)

Micro-USB Cable (included)

Charging input: DC 5V/1A

 
System languages: 12



2" HD
Screen



40 Megapixel
Lens



1080P
HD Video



Built-in
Memory



Rechargeable
Battery

BATTERY DISPOSAL

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

Never throw batteries into a fire or attempt to open the outer casing. Should your product develop a fault please visit our website at www.groov-e.co.uk

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

groov▶▶e

Unit J

Braintree Road

Braintree Industrial Estate

Ruislip

Middlesex

HA4 0EJ

Authorised EU Representative

Rashmian EU Ltd

Robwyn House

Suite 3E

Corrintra

Castleblayney

Co. Monaghan

Ireland

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty

www.groov-e.co.uk/warranty