

groov▶▶**e**

GV-CR01 **Light**
Curve

Wake-Up Light Alarm
Clock with Radio



User Manual

www.groov-e.co.uk

30 Day Right To Return



We do not envisage any problems occurring with your Groov-e GV-CR01 Light Curve. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with your proof of purchase for an exchange or refund.

12 Month Guarantee



This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase, in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk


“Congratulations on your purchase and Thank You for choosing the Groov-e GV-CR01 Light Curve. Please read the guide carefully before using.”

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

- 1. Keep the adapter dry.***
- 2. Do not let water run into the appliance or spill water onto the appliance.***
- 3. Do not immerse the appliance in water or rinse under the tap.***
- 4. Do not place anything close to the appliance that could cause water or any other liquid to drip or splash onto the appliance.***
- 5. This appliance is for indoor use only.***
- 6. Never use the appliance if the lamp housing is damaged, broken or missing.***
- 7. Only use the appliance in combination with the adapter supplied.***
- 8. Place the appliance on a stable, level and non-slippery surface.***
- 9. Do not impair the cooling of the appliance by covering the appliance with items such as blankets, curtains, clothes, papers, etc.***
- 10. Do not use the appliance at room temperatures lower than 10°C or higher than 35°C.***

Overview

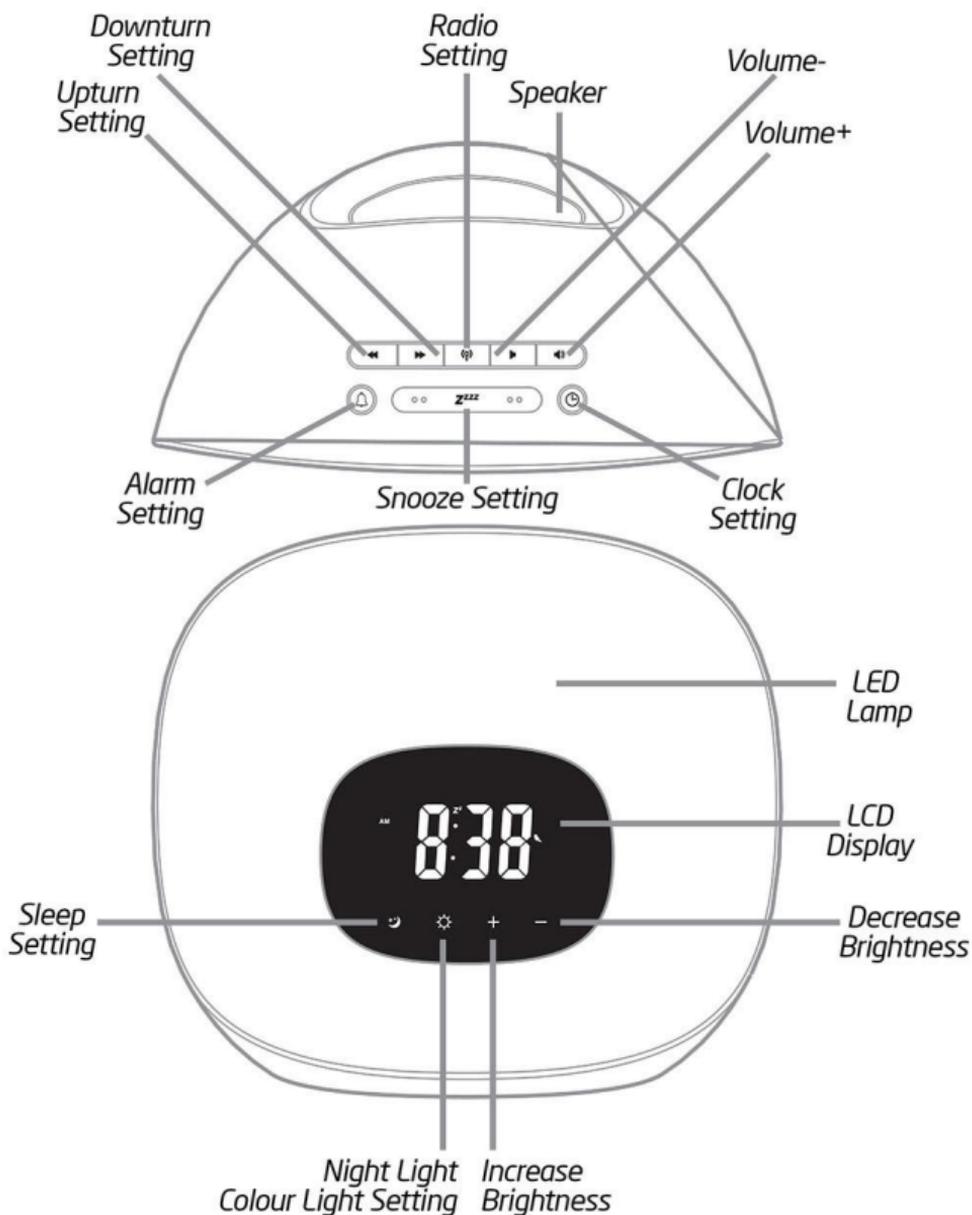

Power



•Insert the power adapter DC connector into the power jack on the rear of the unit.




ATTENTION: The included power transformer is dedicated to this product and cannot be used for other appliances.


•When the unit is plugged into a mains supply and switched on the light illuminates for 2 seconds, and the clock will display clock AM 0:00.

In the event of a power failure there is no clock display, but the clock timing is maintained for 3 months by the battery back up function.

Battery Installation

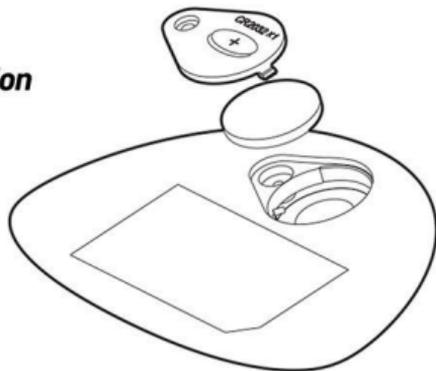

Clock Settings

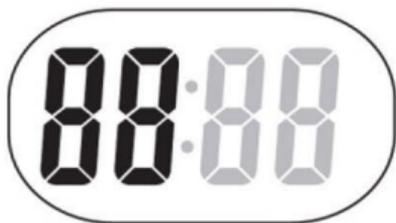


Press the clock settings button  for 2 seconds to enter the clock settings.



Clock Hours will flash.

Press  to switch between hours/minutes.

Press  or  to plus/minus time.

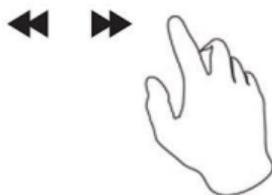

Press  again for 2 seconds. Then leave for 5 seconds and it will exit clock settings and return to clock mode.

Alarm settings

Above clock display, press  to turn on/off the alarm. The alarm icon is displayed or not accordingly.

Press  for 2 seconds to enter the alarm settings, the FM function will stop at this time and the alarm icon and alarm hour begin flashing, press  to set the alarm hour, minute, sound, (press ,  to choose sound, press ,  to control volume of sound)

There are 3 alarm clock modes to choose from (1: wake-up light+ alarm, 2: alarm only, 3: wake-up light only) followed by the wake-up light time either 10/20/30 minutes or to cancel settings.

As the clock settings flash press the up or down buttons to adjust the alarm hour or minute.

There are eight kinds of alarm sounds, Nos 1-6 are natural wake up sounds, No 7 is a beep, No 8 is the FM radio.  will flash when 1 to 7 is selected and when set 8 is selected the radio icon will flash. The icons will disappear when you exit the settings.

The Wake-up light time options are 10/20/30 minutes, displayed as "0:10/0:20/0:30"

If no buttons are detected as being pressed for approximately 7 seconds or you press  for 2 seconds you will exit the alarm settings mode and return to the clock display.

Wake-Up Light Functions

Turn on the alarm function and set the mode to either

1. Wake-up light+ alarm

or

3. Wake-up light only, set the alarm time, and select the Wake-up light function period to begin either 10/20/30 minutes earlier.

When the Wake-up light function period is reached (10/20/30 minutes ahead of the Alarm time setting) the Wake-up function will begin. The light brightens gradually through ten levels emulating a sunrise and will be at its brightest when the Alarm time is reached.

During the Wake-up light process, press  to stop the light becoming any brighter. When you turn off the wake-up and alarm function, the alarm icon is not displayed, and then you can adjust the light using the touch sensitive buttons.

During the Wake-up light process, other buttons such as the touch sensitive buttons will not function.

Please ensure when setting your alarm times, you allow for the respective 10/20/30 minutes required for the Wake-up light process to begin.

i.e. If at 6.45 am you decide to set your alarm for 7.10 am and select the 30-minute Wake-up period you have not allowed sufficient time for it to begin and so it will not respond.

Alarm Functions

Whilst the alarm is active all other functions cease until the alarm is switched off, the Alarm will ring for one hour if not switched off.

Whilst the alarm is active the touch controls are disabled.

During the alarm activation period the volume gradually increases. During the alarm activation period, press  to stop alarm function.

During the alarm activation period, press zzzz to stop the Alarm sound to enter the snooze function.

During the alarm activation period, you can press volume up, down, alarm, clock, or radio button to stop the alarm sound and access the required function.

Snooze functions

During snooze function, ZZ will display, press  to cancel the alarm and snooze function. Press again to reset the alarm for the next day. Any other of the top panel buttons pressed will not work with exception of the  button which will enter radio mode leaving the snooze function active.

Snooze period is set at 10 minutes, all other functions during this time will stop, the alarm will ring for one hour if not switched off. During this period Snooze can be reset as required.

FM Functions

In clock mode, press (📻) to get to the radio function, the initial channel is 87.5.

Please press the (📻) button for approximately 3 seconds to enter the automatic searching mode, the channel search starts from the lower to the higher frequency settings and saves them automatically up to a maximum of 40 channels if a subsequent auto search is performed the stored channels will be refreshed.

When the radio is on, press ◀◀ or ▶▶ to return to radio mode and to change storage channel.

To adjust the channel press ◀◀ or ▶▶ for approximately two seconds to quickly adjust the channel, it will stop automatically once a channel signal is received.,

Quickly press ◀◀ or ▶▶ to stop, and press (📻) to exit radio.

Channel storage:

After performing an auto search, for example and channel 1 is currently 90.5, press ◀◀ or ▶▶ for approximately two seconds to search automatically for channel 91.5, channel 1 90.5 will now be replaced by 91.5 you may continue until you reach your preferred station.

If the unit has been switched off press (📻) for approximately 2 seconds to recommence auto search. press ▶ / (🔊) to control the volume. And press (📻) to quit radio mode, to return to clock mode.

Whist in radio mode, the unit will revert to clock mode within 7 seconds without any buttons being activated , the radio on indicator will be displayed.

Sleep Function

The sleep function acts as a sunset simulator, slowly decreasing the light on the unit and eventually switching it off

To activate:

Under the clock display, press  key to get into the Sleep setting mode.

Whilst in the sleep setting mode, press $-/+$ to select your sleep time setting between OFF/10/20/30 minutes.

Once you have chosen a sleep time, wait 5 seconds for it to activate. The light function will then turn on.

During sleep time, the lights brightness will gradually change from light to dark emulating a sunset in 10 stages according to your sleep time. You can control the brightness manually by pressing the $-/+$. If you change the brightness manually, do note the gradual change function will be disabled but the light will still turn off at the end of the sleep period.

When the sleep time is up, the light will turn off automatically and so will the radio if playing.

During sleep time, press  to cancel the sleep time. The light will remain active. Follow this by pressing the  to turn the light off.

Light Functions

When there is no Wake-Up Light activated or Alarm ringing you can use the touch sensitive dimmer controls for the brightness levels

Short press  to start or stop the sunlight function, press brightness \uparrow / \downarrow to adjust the brightness, short presses will allow for 10 levels of dimming, and a long press is for step-less dimming.

RGB Mood light function:

Long press  for approximately 3 seconds to open the Mood light function, and the various colour lights will cycle in turn.

Short press  to pause or continue the Mood Lights. Short press \uparrow / \downarrow to select your preferred colour of Mood Lighting.

Long press  for approximately 3 seconds to exit the Mood Lighting function.

Other functions:

In clock mode, you can short press **ZZZZ** to adjust the brightness of the LCD screen from high brightness to low and to turn off.

If you unplug the unit from the mains supply (and the internal battery is working normally) the display and all functions will be off but the time settings are maintained.

Specifications

- **Wake-Up light - sunrise simulation wakes you up naturally**
- **Sleep function - sunset simulation**
- **Sunrise/Sunset simulation - adjustable from 10 to 30 minutes**
- **LED bedside lamp - 10 levels of brightness**
- **RGB light - creative mood lighting (7 colours)**
- **LED brightness 220 lumens**
- **LED lifespan 15,000 hours**
- **FM Radio**
- **LCD clock display - 3 settings: high/low/off**
- **Alarm clock**
- **8 alarm sounds**
- **Snooze function**
- **Touch control**
- **DC mains 12V (included)**



Sunrise/Sunset
Simulation



LED
Lamp



Mood
Lighting



FM
Radio




8 Alarm
Sounds



Touch
Control

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

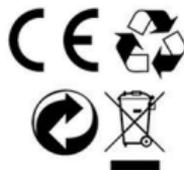

Guarantee

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

- 1)** Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.
- 2)** This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.
- 3) This Guarantee Excludes:**
 - (i)** All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.
 - (ii)** Alterations or adjustments made to equipment
 - (iii)** Loss of data resultant from malfunction of hard drive or other storage device
 - (iv)** Damage caused to any third party device as a result of using the product.
- 4)** No liability under this guarantee shall be incurred:
 - (i)** In respect of damage or loss occurring during transit to or from the purchaser
 - (ii)** Where the serial number plate of the equipment has been removed or altered in any way.
- 5)** Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.
- 6)** The cost of carriage to and from Groov-e shall be borne by the purchaser.
- 7)** This guarantee is personal to the original purchaser and is not transferable.
- 8)** If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at.

groov>e

Unit J

Braintree Road

Braintree Industrial Estate

Ruislip

Middlesex

HA4 0EJ

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8845 7704

Made in China