

groov▶▶**e**

GV-CR04 Zeus



User Manual

*DAB/FM Clock Radio
with Wireless
Charging & Bluetooth*



30 Day Right To Return



We do not envisage any problems occurring with your Groov-e GV-CR04 Zeus. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.

12 Month Guarantee



This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.

Extended Warranty



*Please register your product within 30 days from date of purchase
www.groov-e.co.uk/warranty.
Proof of purchase required.*

Contact Us



*Reach out to us at **info@groov-e.co.uk**
or visit **www.groov-e.co.uk***


***“Congratulations** on your purchase and **Thank You** for choosing the groov-e GV-CR04 Zeus, DAB/FM Clock Radio with Wireless Charging and Bluetooth. Please read the user guide carefully before using”.*

Important safety information

- 1•** *Keep the product and all its parts out of reach of small children.*
- 2•** *Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.*
- 3•** *Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.*
- 4•** *Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.*
- 5•** *Disconnect your Radio from the mains power supply during thunderstorms.*
- 6•** *Always check that you have completely switched off your Radio, before you change or disconnect the power supply.*
- 7•** *If the Radio will not be used for a long period of time, make sure that the mains power is unplugged.*


OVERVIEW

Package Contents:
GV-CR04 Zeus **1pc**
DC Adapter **1pc**
Instruction
Manual **1pc**

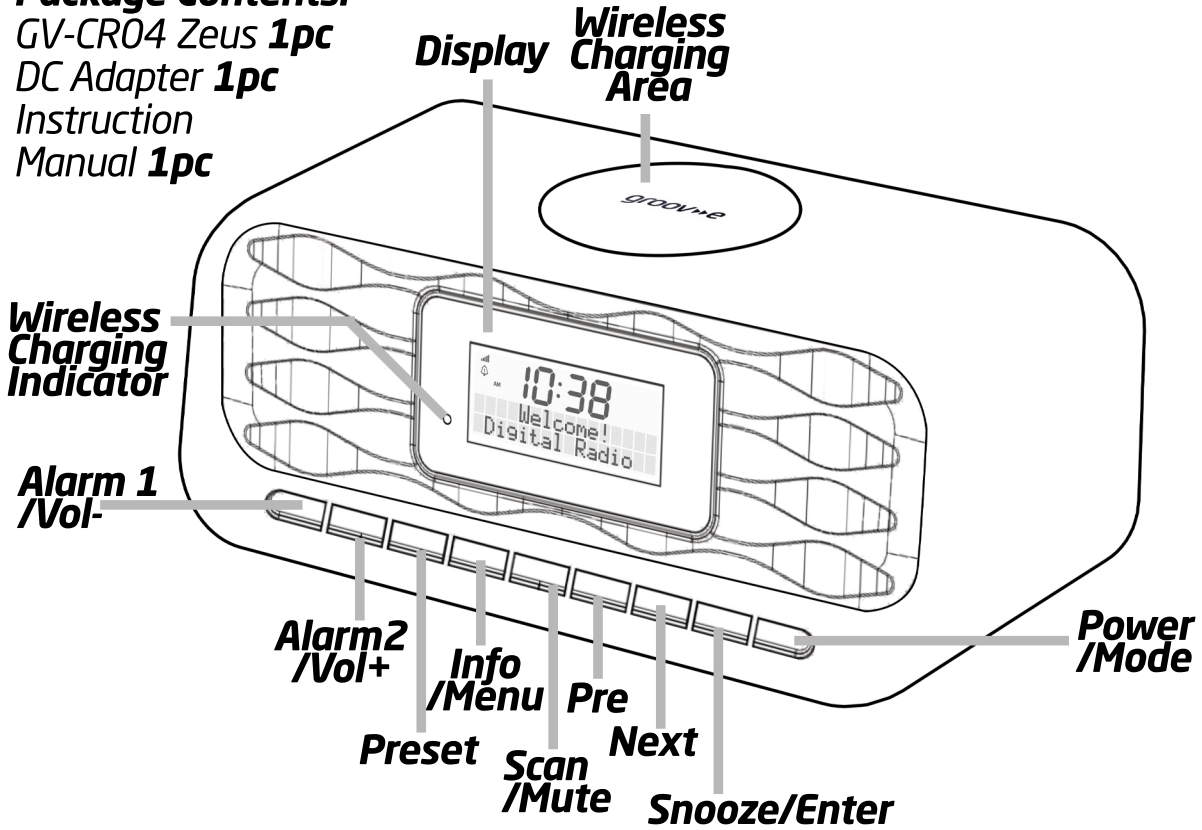

Telescopic Antenna
(Fully extend the antenna you scan for DAB or FM stations).

BACK

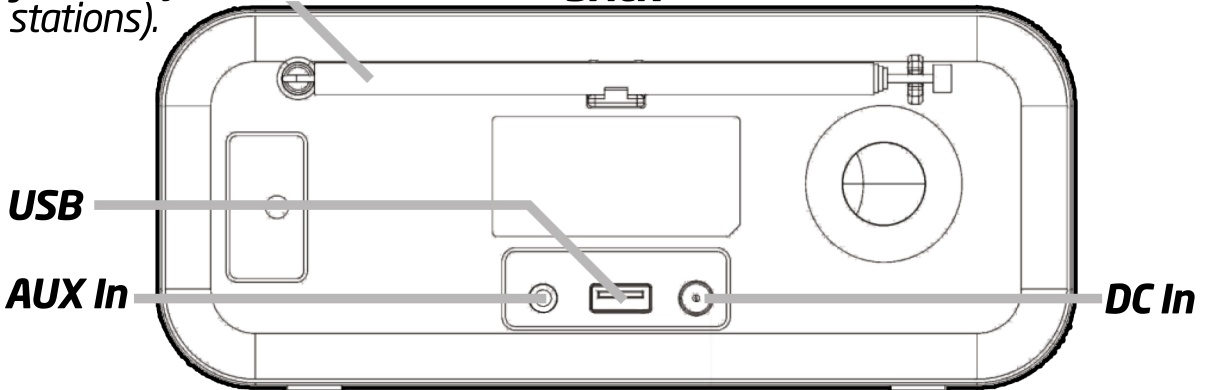

OPERATION

POWER ON/STANDBY

When the unit is turned on for the first time, after approximately 5 seconds the radio will auto-set the date/time, now the Press the **POWER/MODE** button to select DAB then press and hold the **SCAN/MUTE** button to start the automatic scan once complete the display will show the first available DAB station then use **PRE** or **NEXT** buttons to scroll to your preferred station then press the **SNOOZE/ENTER** to play.

Or you can also In DAB mode, press and hold **INFO/MENU** button, Scan will be displayed. Then press the **SNOOZE/ENTER** button, then use the **PRE** or **NEXT** buttons to scroll to your preferred station then press the **SNOOZE/ENTER** to play.

DAB Scan (Manually)

a. In DAB mode, press and hold **INFO/MENU** button to enter the Menu, SCAN will be displayed use the Pre/Next buttons scroll to Manual Tune.

b. Press the **SNOOZE/ENTER** button then press the **PRE** or **NEXT** button to scroll through the frequencies.

c. After choosing the frequency, press the **SNOOZE/ENTER** button to enter, if there is a station in that frequency press the **SNOOZE/ENTER** button repeatedly to show station frequency information and group station names, also the display and the signal level, press the **SNOOZE/ENTER** button to confirm, and play available stations. if there is no station signal in that frequency, press the **INFO/MENU** button to return to manual scan so you may start again.

DAB INFO

When playing a DAB station, repeatedly press the **INFO/MENU** button, to see the following: DLS–Programme Type–Ensemble/Multiplex(Group Name)–Time and date–Frequency–Audio Bit Rate–Signal strength–Signal error rate–DLS.

OPERATION

SCAN/MUTE BUTTON

You can during DAB playback short press this button to mute music or long press it to begin Auto Scan.

PRESET DAB STATIONS

The device can store 30 DAB stations

a. When playing a DAB station, press and hold the **PRESET** button, the panel will display "Preset store", if the preset station is empty, it will display empty.

b. Press the **PRE** or **NEXT** buttons to choose the number (1-30) where you would like to store the station;

c. After you have chosen the Preset number, press the **SNOOZE/ENTER** button to store, the panel will display stored. To store another station, please repeat above steps.

RECALL PRESET STATIONS

a. When playing a DAB station, press the **PRESET** button, the panel will display Preset Recall, and display the available preset stations;

b. Press the **PRE** or **NEXT** button to choose the station you like to play and press the **SNOOZE/ENTER** button to select.

OPERATION

When playing a DAB station long Press the **"INFO/MENU"** button to enter settings.

SCAN SETTINGS press the **SNOOZE/ENTER** to begin Auto Scan then press the **PRE** or **NEXT** button to select a station. Press the **SNOOZE/ENTER**

to play then Press and hold the **"INFO/MENU"** button again then press the **PRE** or **NEXT** button to scroll to

MANUAL TUNE press the **SNOOZE/ENTER** to begin manual Tune then press the **PRE** or **NEXT** button to select a station. Press the **SNOOZE/ENTER** to play. Now Press and hold the **"INFO/MENU"** button again to return to the menu then press the **PRE** or **NEXT** button to scroll to

PRUNE Press the **SNOOZE/ENTER** then Press the **PRE** or **NEXT** button to choose between **YES/NO** and press the **SNOOZE/ENTER** button to select. Now Press and hold the **"INFO/MENU"** button again to return to the menu then press the **PRE** or **NEXT** button to scroll to System.

Press the **SNOOZE/ENTER** button to enter

TIME/DATE Press the **SNOOZE/ENTER** button to enter then either press the **SNOOZE/ENTER** button to make selections or Press the **PRE** or **NEXT** button to scroll between Set Time/date Set Hour 12/24 Set Time/ date format or auto update, press the **SNOOZE/ENTER** to confirm selections. Press the **"INFO/MENU"** button again to return to menu then press the **PRE** or **NEXT** button to scroll to SYSTEM then press the **SNOOZE/ENTER** button to enter then press the **PRE** or **NEXT** button to scroll to Back Light.

BACK LIGHT Press the **SNOOZE/ENTER** button to enter then Press the **PRE** or **NEXT** buttons too scroll to Time Out and Level settings each time using the **PRE** or **NEXT** buttons to scroll through the choices and pressing the **SNOOZE/ENTER** button to confirm selections. Then press the **"INFO/MENU"** button again to return to menu then press the **PRE** or **NEXT** button to scroll to Alarms.

Note: The screen will switch off after the time selected in the Time Out settings, but the radio continues to play/be powered.

OPERATION

ALARMS Press the **SNOOZE/ENTER** button to enter then press the **PRE** or **NEXT** button to choose between Alarm 1 or 2, Alarm On/Off, Alarm Hours, Alarm Minutes, Source, Volume Duration etc using the **PRE** or **NEXT** button to choose setting and then press the **SNOOZE/ENTER** to select and confirm selections. Once the Alarm is set the display will return to your DAB station.

NOTE: You can also set the Alarm by following method 2 please see below.

Now press and hold the **INFO/SCAN** button and then use the **PRE** or **NEXT** button to scroll to system then press the **SNOOZE/ENTER** button to enter, then press the **PRE** or **NEXT** button to scroll to Sleep. **SLEEP** Press the **SNOOZE/ENTER** button to enter Press the **PRE** or **NEXT** button to choose between Off and up to 1hr and 30 Minutes then press the **SNOOZE/ENTER** to confirm selections. then press the **PRE** or **NEXT** button to scroll to EQ.

EQ Press the **SNOOZE/ENTER** button to enter Press the **PRE** or **NEXT** button to choose between Normal—Classical—Jazz—Pop—Rock—Speech—MY EQ then press the **SNOOZE/ENTER** to confirm selections select. then press the **PRE** or **NEXT** button to scroll to language.

LANGUAGE Press the **SNOOZE/ENTER** button to enter Press the **PRE** or **NEXT** button to choose between the 9 options then press the **SNOOZE/ENTER** to select. then press the **PRE** or **NEXT** button to scroll to Factory Reset.

FACTORY RESET Press the **SNOOZE/ENTER** button to enter, Press the **PRE** or **NEXT** button to choose between **YES/NO** then press the **SNOOZE/ENTER** to select. then press the **PRE** or **NEXT** button to scroll to Sw Version.

Sw Version Info Only

Press **INFO/SCAN** button to exit

OPERATION

ALARM SETTING METHOD 2

In standby mode, press the **Alarm1** or **Alarm2** button to select then press **PRE** or **NEXT** buttons to turn the alarm on/off the icon will show on the panel when the alarm is turned on. Press the **SNOOZE/ENTER** to button to select.

Press the **SNOOZE/ENTER** to button to enter alarm settings, the hour digit will flash, press the **PRE** or **NEXT** button to adjust the hour.

Press the **SNOOZE/ENTER** button to select.

Then the minute digits will flash, press the **PRE** or **NEXT** button to adjust the minutes then Press the **SNOOZE/ENTER** button to select.

Press the **PRE** or **NEXT** button to the choose alarm source choose from Buzzer FM, DAB then Press the **SNOOZE/ENTER** button to select

Press the **PRE** or **NEXT** button to the choose between last station listened or a stored pre-set Press the **SNOOZE/ENTER** button to select

Press the **PRE** or **NEXT** button to choose Alarm repeat either Daily—Once—Weekends—Weekdays—Daily Press the **SNOOZE/ENTER** button to confirm.

Press the **PRE** or **NEXT** button to choose the max Alarm Volume, (the volume will ascend slowly to the max selected when Alarm activates)

Press the **SNOOZE/ENTER** button to confirm.

Press the **PRE** or **NEXT** button to choose duration from either 60—90—15—30—45(seconds) then Press the **SNOOZE/ENTER** button to select.

ALARM OFF

Press **Alarm 1** or **2 button** to switch off Press any other button go to into snooze mode - Alarm will sound again in 9 minutes and a countdown timer is displayed.

OPERATION


FM RADIO

FM SCAN

1. In FM mode, press the **PRE** or **NEXT** button to search stations manually by 20KHz each step then press the **SNOOZE/ENTER** to select
2. Press and hold **SNOOZE/ENTER** button to automatically search stations, it will stop and play when a station found.
3. Press and hold **SCAN/MUTE** button to automatically search all available stations then use the **PRE** or **NEXT** button to scroll through available stations then press the **SNOOZE/ENTER** button to play. While in FM mode Short Press the "**INFO/MENU**" button repeatedly to view the current menu text information: such as Radio text, Programme type, Name, strength etc.

WIRELESS CHARGING

Put your phone (which supports the wireless charging function) on the charging area on the top of the device, the front indicator will be on to confirm and wireless charging will start.

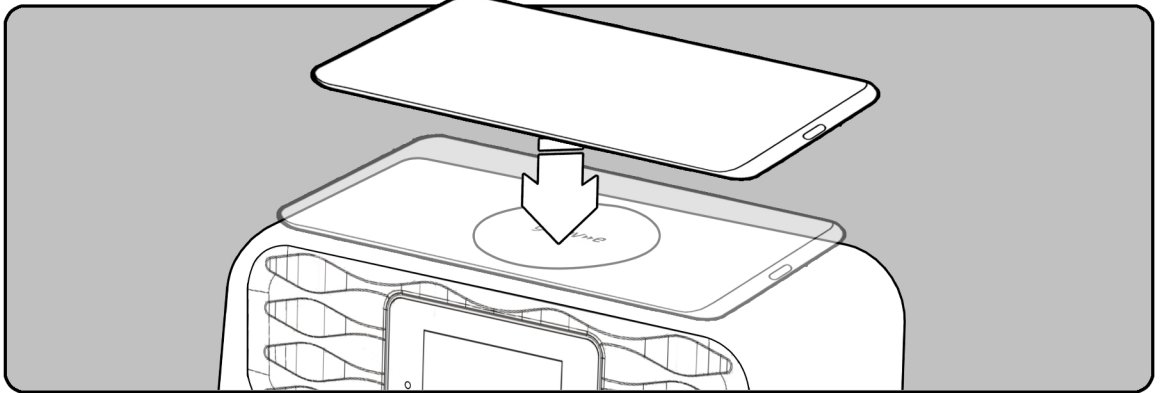

Please Note: Some Mobile device cases can inhibit wireless charging and may have to be removed. Also please ensure your device supports wireless charging, you may have to purchase a separate kit for it to be compatible.

USB OUTPUT CHARGING

When the device is being powered by the AC adapter, it can supply power to other devices through the back USB output port. You will require the correct USB A cable for your device.

OPERATION

AUX IN

Using a 3.5 mm jack lead (not supplied) you can play music from other devices ensuring you have selected the Aux in Mode when turning on the radio. Use your device to control the track selections including Play/Pause/Vol+/Vol-, and on the radio you can use the **Vol+/Vol-** buttons and the **SCAN/MUTE** button to silence but not pause your music.

BLUETOOTH PAIRING

With the radio turned on Press the **POWER/MODE** button and select BT Bluetooth mode (Panel will display Not Connected) Open the Bluetooth settings on your phone, tablet or other Bluetooth enabled audio device, make sure Bluetooth is on and search for "**GV-CR04**". When prompted for the pairing code, enter 0000. Once paired, the panel will display Connected.

PLAYING MUSIC

Select desired song or playlist on your phone, tablet or other Bluetooth enabled audio device. Press **SNOOZE/ENTER** button to start or pause the music. Press **PRE** or **NEXT** button to go to previous or next song. Press the "**Volume -/+**" button to adjust the volume or use your devices volume controls.

Press and hold **SNOOZE/ENTER** button to disconnect from the current connected device.

FEATURES

- **DAB/FM radio/Bluetooth/Aux Playback**
- **60 Pre-set stations: 30 DAB & 30 FM**
- **Wireless charger 10W - charge your wireless enabled device**
- **USB charging port 1A for charging devices (cable required)**
- **Bluetooth connectivity for wireless music playback**
- **6W Speaker**
- **Dot matrix LCD display**
- **Radio text**
- **Clock - time and date**
- **Dual alarm - wake up to radio or buzzer**
- **Snooze function**
- **Sleep timer**
- **12/24 hour clock**
- **Display Dimmer**
- **3.5mm Aux-in**
- **Telescopic antenna**
- **DC Mains power (included)**



Wireless
Charging




USB
Charging
Port



DAB/
FM Radio
(60 Presets)



Bluetooth
Connectivity

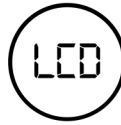

LCD
Display



6W
Speaker

SPECIFICATIONS

Bluetooth version: 5.0

Bluetooth pairing name: GV-CR04

Bluetooth frequency: 240GHz ~ 2.480GHz

Input: DC 9V/2A

Speaker output: 6W (2 x 3W)

FM Frequency response: 87.5-108MHz

DAB Frequency response: 174MHz ~ 240MHz

Wireless charging frequency: 150~170 kHz

USB charging output: 5V/1A

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.

Check with you Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov»e

Unit J

Braintree Industrial Estate

Braintree Road

Ruislip

Middlesex

HA4 0EJ UK

Authorised EU Representative

Rashmian EU Ltd

Robwyn House

Suite 3E

Corrintra

Castleblayney

Co. Monaghan

Ireland

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty

www.groov-e.co.uk/warranty