

groov▶▶e

GV-DR04 Venice

*Portable DAB/FM Digital
Radio*



User Manual

Venice

FM
radio



30 Day Right To Return

We do not envisage any problems occurring with your Groov-e GV-DR04 Venice. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with your proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase. In the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Contact Us

*Reach out to us at **info@groov-e.co.uk** or visit **www.groov-e.co.uk***

"Congratulations on your purchase and **Thank You** for choosing the Groov-e GV-DR04 Venice, Personal DAB Radio. Please read the user guide carefully before using".

Important safety information


- 1•** Keep the product and all its parts out of reach of small children.
- 2•** Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.
- 3•** Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- 4•** Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- 5•** Disconnect your Radio from the mains power supply during thunderstorms.
- 6•** Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- 7•** If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
- 8•** Never throw batteries in a fire or attempt to open the outer casing. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. Dispose of old batteries carefully.
- 9•** Batteries are harmful if swallowed, so keep away from young children.

Only use the power supply that came with the product. The specified external adaptor (OBLIEVE, Model name: OBL06-0501000dB). Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.


 **Caution:** Danger of explosion if batteries are incorrectly replaced.

 **Warning:** To prevent possible hearing damage, do not listen to this radio using earphones at high volume levels for long periods of time.

OVERVIEW

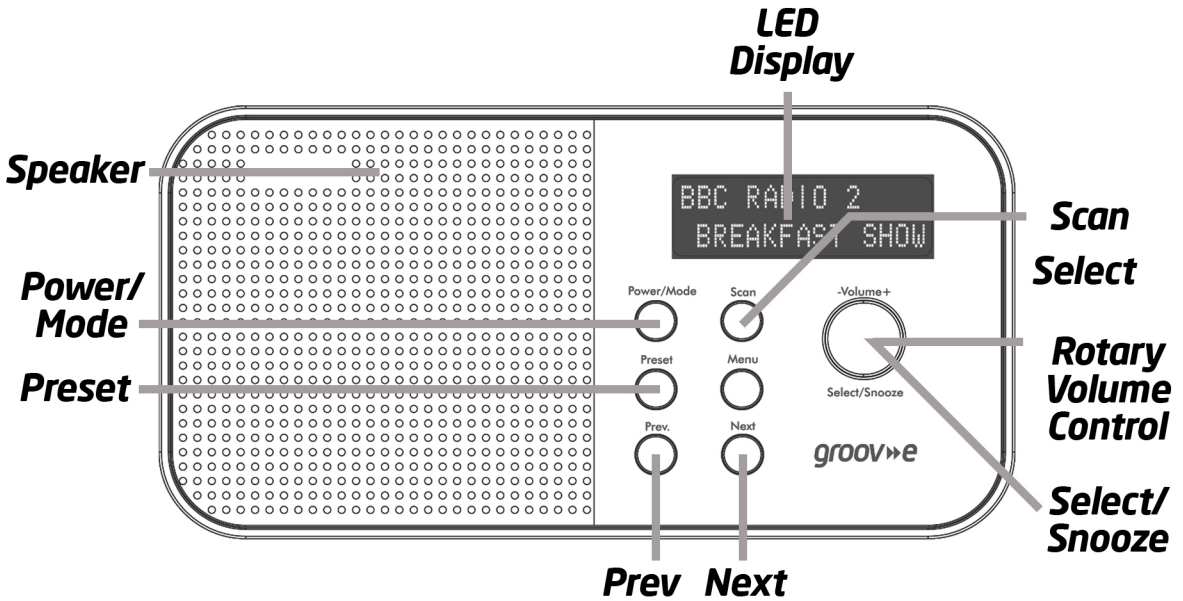

Telescopic antenna Fully extend the antenna before you scan for DAB or FM stations

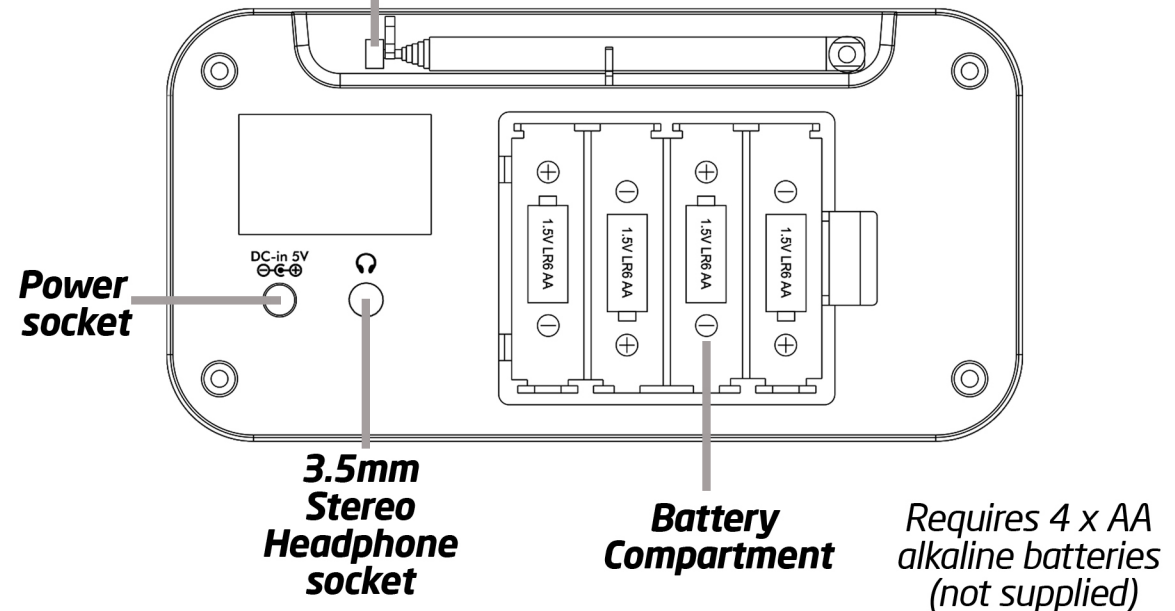

OPERATION

Power/Mode

Short press: Power on.

Short press: Change the mode (DAB/FM).

Short press when the Alarm sounds: Alarm off Long press: Standby mode.

Long press in Standby mode: Power off.

Scan:

Short press in DAB mode: Rescans for DAB stations.

Short press in FM mode: Scans up the FM Frequency band.

Preset:

Long press: Store DAB or FM radio presets (10 DAB/10 FM). Press rotary control to confirm.

Short press: Recall stored DAB or FM radio presets. Press rotary control to confirm.

Rotary volume control/Select/Snooze:

Turn clockwise to increase the volume.

Turn anti-clockwise to decrease the volume.

Short press: Select a displayed DAB radio station in the station list/Select or confirm an option in the Menu/Confirm or Select a radio Preset.

Short press when the Alarm sounds: Activates a 10 minute Snooze.

Menu:

Long press: Enter the Menu options.

Short press: Change the displayed radio station information.

Short press within the menu: Steps back and exits the Menu.

Prev:

Short press in DAB mode: Moves back through the DAB station list.

Short press in FM mode: Moves down the frequency band in 0.05MHz steps.

Short press in the Menu: Moves through the Menu options.

Short press in Preset Store or Recall: Moves through the presets (1-10)

Long press in FM mode: Scans down the frequency band.

Next:

Short press in DAB mode: Moves forward through the DAB station list.

Short press in FM mode: Moves up the frequency band in 0.05MHz steps.

Short press in the Menu: Moves through the Menu options

Short press in Preset Store or Recall: Moves through the presets (1-10)

Long press in FM mode: Scans up the frequency band.

OPERATION

Setting up

- 1. Connect the mains power lead into the socket on the back of the radio and fully extend the telescopic aerial in a vertical position to obtain the maximum signal strength.*
- 2. Plug the power adaptor into the mains power wall socket and switch on.*
- 3. Short press the Power button. Your radio will switch on and on first use will begin an automatic scan for DAB radio stations. The DAB radio station list is stored in the memory and so the next time you switch your radio on, the station search does not take place.*
- 4. Use the Prev. and Next buttons to scroll through the station list and press the rotary control to Select.*

Inserting the batteries (optional)

Before installing the batteries (not included) please ensure that the radio is switched off and is unplugged from the mains power supply.

- 1. On the back of the radio, push in the tab to release and remove the battery compartment cover. Insert 4 x AA good quality alkaline batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around. Replace the battery cover, making sure it 'clicks' shut.*
- 2. For battery operation, please switch off the mains adaptor and remove the mains power plug from the back of the radio.*

OPERATION

Setting an Alarm In DAB or FM mode:

- 1. Long press the Menu button to enter the Menu options.*
- 2. Short press the Prev or Next buttons to scroll to '<System>'. Short press the rotary control.*
- 3. Short press the Prev or Next buttons to scroll to '<Alarm>'. Short press the rotary control.*
- 4. '<Alarm 1 > is displayed'. Short press the rotary control or use the Prev or Next button to scroll to '<Alarm 2>' (if required) and short press the rotary control.*
- 5. 'Alarm 1 (or 2) Setup' is displayed. Short press the rotary control. 'Alarm 1 (or 2) Wizard On time' is displayed and the hour digits for the alarm will flash.*
- 6. Use the Prev or Next buttons to scroll and short press the rotary control to change and confirm the alarm time, each alarm option and setting.*
- 7. When you have completed the Alarm set up, 'Alarm 1 (or 2) Wizard' is displayed again, together with 'Alarm Off (or On)'.*
- 8. Use the Prev or Next buttons to choose 'Alarm On' or 'Off' and short press the rotary control. 'Alarm Saved' is displayed.*

Stop the Alarm

When the alarm sounds, short press the Power/Mode button, 'Alarm off' is displayed. Alternatively, you can short press the rotary control to Snooze (see Snooze function below). Snooze When the alarm sounds, you can short press the rotary control to snooze for 10 minutes. A snooze time countdown will be displayed until the alarm sounds again.

SPECIFICATIONS



DAB/FM
Radio



20 Presets
(10 DAB & 10 FM)



LCD
Display



Alarm
Clock



3.5mm
Headphone
Socket



Mains or Battery
Operated

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov»e
Unit J
Braintree Road
Braintree Industrial Estate
Ruislip
Middlesex
HA4 0EJ

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Made in China