

groov▶▶e

GV-DR06 *Berlin*



User Manual

*Colour Screen
DAB/FM Radio
with Bluetooth*



30 Day Right To Return



We do not envisage any problems occurring with your Groov-e GV-DR06 Berlin. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.

12 Month Guarantee



This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.

Extended Warranty



*Please register your product within 30 days from date of purchase
www.groov-e.co.uk/warranty.
Proof of purchase required.*




Contact Us

*Reach out to us at **info@groov-e.co.uk**
or visit **www.groov-e.co.uk***

"Congratulations on your purchase and **Thank You** for choosing the Groov-e GV-DR06 Berlin, Colour Screen DAB/FM Radio with Bluetooth. Please read the user guide carefully before using".

Important safety information

- 1•** Keep the product and all its parts out of reach of small children.
- 2•** Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.
- 3•** Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- 4•** Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- 5•** Disconnect your Radio from the mains power supply during thunderstorms.
- 6•** Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- 7•** If the Radio will not be used for a long period of time, make sure that all of the batteries are removed from the battery compartment and the mains power is unplugged.
- 8•** Never throw batteries in a fire or attempt to open the outer casing. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. Dispose of old batteries carefully.
- 9•** Batteries are harmful if swallowed, so keep away from young children.

 **Caution:** Danger of explosion if batteries are incorrectly replaced. .

 
 **Warning:** To prevent possible hearing damage, do not listen to this radio using earphones at high volume levels for long periods of time.

OVERVIEW

Package Contents:
GV-DR06 Berlin **1pc**
DC Adapter **1pc**
Instruction
Manual **1pc**

MENU/INFO ALARM PREVIOUS NEXT


**POWER
/MODE**

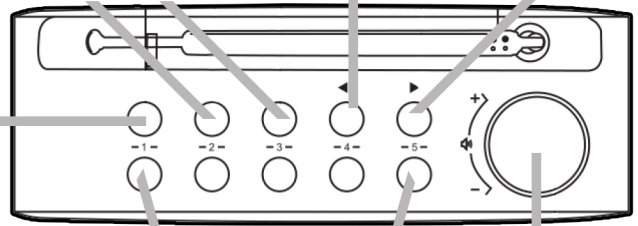

No. 1-5

**SELECT
SNOOZE
VOLUME +/-**

 FRONT

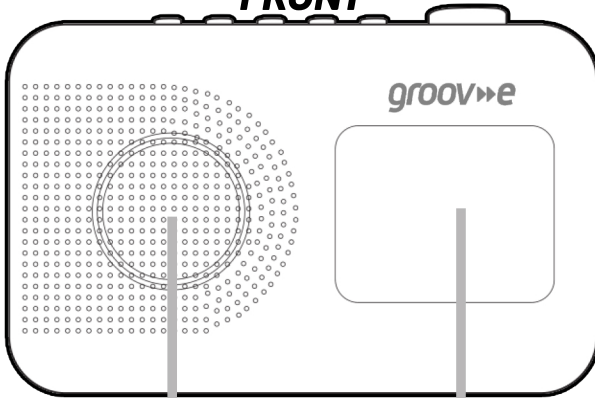

SPEAKER


**COLOUR
SCREEN**

Telescopic Antenna
(Fully extend the antenna
you scan for DAB or FM
stations).


ON/OFF

**Headphone
socket**

 **DC 5v
Power In**

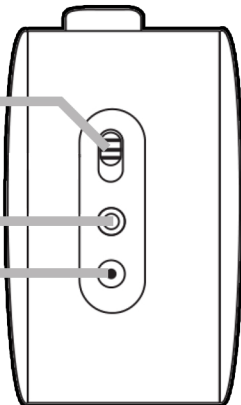

**BATTERY
COMPARTMENT**

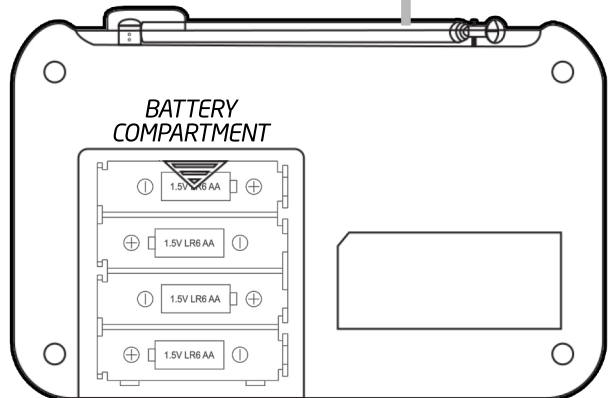 

BACK

OPERATION

POWER ON/OFF

1. Plug in the DC adapter and connect the adapter to the power source, slide the side switch to the on ON position, the device will enter Standby mode, press the Power/Mode button to turn on the device, it will enter DAB mode (or the mode when you exited last time) and start scanning;
2. Press and hold the **Power/Mode** button again to return to Standby mode.
3. Turn the side switch to power off.

USING BATTERIES

1. Before installing the batteries (not included) please ensure that the Radio is switched off and has been unplugged from the mains power supply.
2. On the back of the Radio, slide open the compartment cover to remove it.
3. Insert 4 x 1.5V AA-size (also known as LR-6) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around.
4. Replace the battery cover, making sure that it 'clicks' shut.

Note: For battery operation please ensure that the mains power is switched off and remove the mains power plug from the socket on the back of the Radio.

DAB RADIO

With the radio turned on, it comes on in DAB mode, it will begin to search DAB stations automatically or play the station played last time, start searching and the device will automatically synchronize the time.

1. You can adjust the antenna to enhance the signal.
2. You can also press the **PRE/NEXT** button to choose Full scan and press **Select/Snooze/Volume** knob to start searching again if no station was found (the Display Panel will display "No stations found" and enter DAB setting.

OPERATION

After the auto search is completed, press the **PRE/NEXT** buttons to choose the station you would like to play; or press the **Menu/Info** button to enter DAB settings, to choose from the Station list and press the **Select/Snooze/Volume** knob to enter, then rotate the **Select/Snooze/Volume** knob or press **PRE/NEXT** button to choose the station you like and press **Select/Snooze/Volume** knob to play.

MANUAL TUNE

In DAB mode, press and hold the **Menu/Info** button to enter DAB settings, then choose Manual tune, press **Select/Snooze/Volume** knob to enter, rotate **Select/Snooze/Volume** knob or press **PRE/NEXT** button to choose frequency points, press the **Select/Snooze/Volume** knob to enter manual tune state, then press the **Menu/Info** button or the **PRE/NEXT** button to return to the upper level Menu.

Preset / Store stations:

Switch to the station you like, then press and hold the **Menu/Info** button, then press the **PRE/NEXT** button choose Preset Save and press **Select/Snooze/Volume** knob to enter, then rotate the **Select/Snooze/Volume** knob or press the **PRE/NEXT** button to choose an empty station location, then press **Select/Snooze/Volume** knob to store it, store your favourites to Presets **1-5**.

To quick switch to your favourite station, press **1-5** button to choose from the preset stations; or press and hold the **Menu/Info** button, and use the **PRE/NEXT** button to choose Preset recall and enter, use the **PRE/NEXT** buttons to switch to the station you like, then press **Select/Snooze/Volume** knob to play.

Press and hold the **Menu/Info** button to enter the main menu setting interface, then press the **PRE/NEXT** to select the corresponding functions then short press the **Select/Snooze/Volume** knob to enter the corresponding function for settings:

OPERATION

Station list – press the **PRE/NEXT** to select the station then short press the **Select/Snooze/Volume** knob to enter

Full scan – press the **PRE/NEXT** to start the full scan then press the **PRE/NEXT** buttons to choose your station then press the **Select/Snooze/Volume** knob to enter

Preset recall – press the **PRE/NEXT** to select the station then short press the **Select/Snooze/Volume** knob to enter

Preset save – Whilst listening to a station you can select this function to store to a location, press the **PRE/NEXT** to select the station location then short press the **Select/Snooze/Volume** knob to save.

Manual tune – press the **PRE/NEXT** to select the frequency then short press the **Select/Snooze/Volume** knob to enter

Prune – press the **PRE/NEXT** to select **YES/NO** then short press the **Select/Snooze/Volume** knob to enter

DRC – press the **PRE/NEXT** to choose between Off/High or Low then short press the **Select/Snooze/Volume** knob to save.

Press **Menu/Info** button to return to upper-level menu. When playing DAB radio station, press **Menu/Info** button to show the station info.

OPERATION

FM RADIO

Turn on the radio, and press the **Power/Mode** button to switch to FM Radio Mode, press "**Volume/Select**" button to enter FM radio mode. (You can adjust the antenna to enhance the signal.)
Press and hold **Menu/Info** button, press **PREV/NEXT** to choose between:

AMS press **Select/Snooze/Volume** knob to enter, choose **Yes** and it will search channels automatically from current channels and the channels will be stored after auto search ends. (Press **Menu/Info** or **PRE/NEXT** button to stop searching, and press **PRE/NEXT** button to search channel manually by 0.05MHz each step)

Preset Recall — Press the **PRE/NEXT** buttons to select the station then short press the **Select/Snooze/Volume** knob to enter

Preset Save — Whilst listening to a station you can select this function to store to a location, press the **PRE/NEXT** to select the station location then short press the **Select/Snooze/Volume** knob to save

Scan Setting — press the **PRE/NEXT** buttons to choose between All stations or Strong Stations Only then short press the **Select/Snooze/Volume** knob to save

Audio Setting — Press the **PRE/NEXT** buttons to choose between Stereo or Mono then short press the **Select/Snooze/Volume** knob to save.

Press the **Menu/Info** button to return to upper-level menu. When playing a FM radio station, press **Menu/Info** button to show station info.

OPERATION

System settings

Sleep Timer press the **PRE/NEXT** buttons to choose between Off,15,30,45, 60,90 and 120 minutes then short press the **Select/Snooze/Volume** knob to save

Time date press the **PRE/NEXT** buttons to choose between Manual , Auto, then short press the **Select/Snooze/Volume** knob to save, you can also set the clock to 12/24 hour and set the date format

Back Light press the **PRE/NEXT** buttons to choose Time Out then using the **PRE/NEXT** buttons choose between off and up to 120 seconds, then short press the **Select/Snooze/Volume** knob to save, press the **PRE/NEXT** buttons to select On Level then using the **PRE/NEXT** buttons choose between High Medium and low then short press the **Select/Snooze/Volume** knob to save, and then using the **PRE/NEXT** buttons choose Dim Level then use the **PRE/NEXT** buttons to choose between High Medium and low then short press the **Select/Snooze/Volume** knob to save

Language press the **PRE/NEXT** buttons to choose between 12 Languages then short press the **Select/Snooze/Volume** knob to save

Factory Reset press the **PRE/NEXT** buttons to choose between Yes/No then short press the **Select/Snooze/Volume** knob to save

Software Version Info only

PAIRING BLUETOOTH

With the radio turned on. Press the **"Power/Mode"** button to choose the Bluetooth mode, wait for 2 seconds to enter Bluetooth mode: Open the Bluetooth settings on your phone, tablet or other Bluetooth enabled audio device, make sure Bluetooth is on and search for "GV-DR06". When prompted for the pairing code, enter 0000. Once paired, the panel will show "Connected".

PLAYING MUSIC

Select the song or playlist on your phone, tablet or other Bluetooth enabled audio device.

Press **Select/SNOOZE/Volume** knob to start or pause the music.

Press the **"PRE/NEXT"** button to go to previous or next song.

Rotate the **Select /SNOOZE/Volume** knob to adjust the volume.

OPERATION

USING HEADPHONES

When playing DAB/FM/Bluetooth, plug in your 3.5mm jack earphones to listen through your earphones, please be careful as listening to loud music for long lengths of time may affect your hearing.

ALARM CLOCK

When connected to a mains supply in either DAB/FM/Standby mode, press the Alarm button to enter alarm1/2 setting. Press the **PRE** and **NEXT** button to switch to Alarm1 or Alarm2 setting.

Then press the **PRE** and **NEXT** button to select Frequency choose between Day, Workday, weekend and week by using the **PRE** and **NEXT** buttons then short press the **Select/Snooze/Volume** knob to save,

Then press the **PRE** and **NEXT** button to set the Date/Time using the **PRE** and **NEXT** buttons and then the **Select/Snooze/Volume** knob to save,

Then press the **PRE** and **NEXT** button to select source choose between Buzzer, Digital or FM and then the **Select/Snooze/Volume** knob to save,

Then press the **PRE** and **NEXT** button to choose duration choose between 15 and up to 120 minutes then the **Select/Snooze/Volume** knob to save,

Then press the **PRE** and **NEXT** button to choose volume level then the **Select/Snooze/Volume** knob to save,

Press the **Menu/Info** button, or wait 30s and it will to return to clock interface.

When alarm rings, press the Alarm button to stop it, and it will ring again at the same time in the next date if the alarm was not turned off in the alarm settings.

OPERATION

SNOOZE

*When the alarm clock rings, press the **Select/SNOOZE/Volume** knob to SNOOZE it, the alarm clock countdown icon will flash on the screen, then enter snooze mode, and it will ring after 10 minutes.*

Turn off Alarm

*When the SNOOZE activates , short press the **Power/Mode** button to turn off the alarm.*

SIDE SWITCH

When connected to DC adapter:

On: *In DAB/FM/Standby mode, turn to Off and it will cut all power;*

Off: *Turn to On, and device will enter Standby mode.*

When in battery powered mode:

On: *In DAB/FM mode, turn to Off and it will cut all power;*

Off: *Turn to On, and the panel will be off*

FEATURES

- **DAB/FM radio**
- **60 pre-set stations: 30 DAB & 30 FM**
- **Bluetooth connectivity for wireless music playback**
- **2.4" TFT colour screen**
- **Backlit LCD display**
- **Radio text**
- **Auto and manual scan tuning**
- **Clock - time and date**
- **Dual alarm - wake up to radio or buzzer**
- **Snooze function**
- **Sleep timer**
- **Display dimmer**
- **3.5mm headphone socket**
- **Telescopic antenna**
- **AC Mains power (included)**
- **4 x AA batteries (not included)**



DAB/FM Radio
(60 Presets)



Bluetooth
Connectivity



LCD
Display



Alarm
Clock



Colour
Screen

Technical specification:

Output DC: DC 5V/1A

Input AC: 100-240V, 50/60Hz

Frequency range:

FM: 87.5-108MHz

DAB+: 174HZ~240MHZ

Speaker: 1.5W

Bluetooth Version: 5.0

Pairing Name: GV-DR06

Bluetooth Frequency Range:
2.4GHz - 2.480GHz

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov»e
Unit J
Braintree Industrial Estate
Braintree Road
Ruislip
Middlesex
HA4 0EJ UK

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Authorised EU Representative
Rashmian EU Ltd
Robwyn House
Suite 3E
Corrintra
Castleblayney
Co. Monaghan
Ireland

Register your purchase for extended warranty
www.groov-e.co.uk/warranty