

groov▶▶e

GV-DR07 Vienna



User Manual

*Rechargeable
Stereo DAB/FM Digital
Radio with
Bluetooth*

DAB[®]
Digital Audio Broadcasting

 **Bluetooth**[®]

30 Day Right To Return



We do not envisage any problems occurring with your Groov-e GV-DR07 Vienna. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.

12 Month Guarantee



This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.

Extended Warranty



*Please register your product within 30 days from date of purchase
www.groov-e.co.uk/warranty.
Proof of purchase required.*

Contact Us



*Reach out to us at **info@groov-e.co.uk**
or visit **www.groov-e.co.uk***

“Congratulations on your purchase and **Thank You** for choosing the Groov-e GV-DR07 Vienna, Personal DAB FM Radio. Please read the user guide carefully before using”.

 
Important safety information

- 1•** Keep the product and all its parts out of reach of small children.
- 2•** Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.
- 3•** Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- 4•** Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- 5•** Disconnect your Radio from the mains power supply during thunder thunderstorms.
- 6•** Always check that you have completely switched off your Radio, before you change or disconnect the power supply.
- 7•** If the Radio will not be used for a long period of time, make sure that the mains power is unplugged.
- 8•** This radio has an integral rechargeable battery. Never throw the radio in to a fire or attempt to open the outer casing. The radio should not be exposed to excessive heat. For disposal the radio should be take to an aproprate recycling facility.


 **Caution:** Danger of explosion if batteries are incorrectly replaced

 **Warning:** To prevent possible hearing damage, do not listen to this radio using earphones at high volume levels for long periods of time.

OVERVIEW

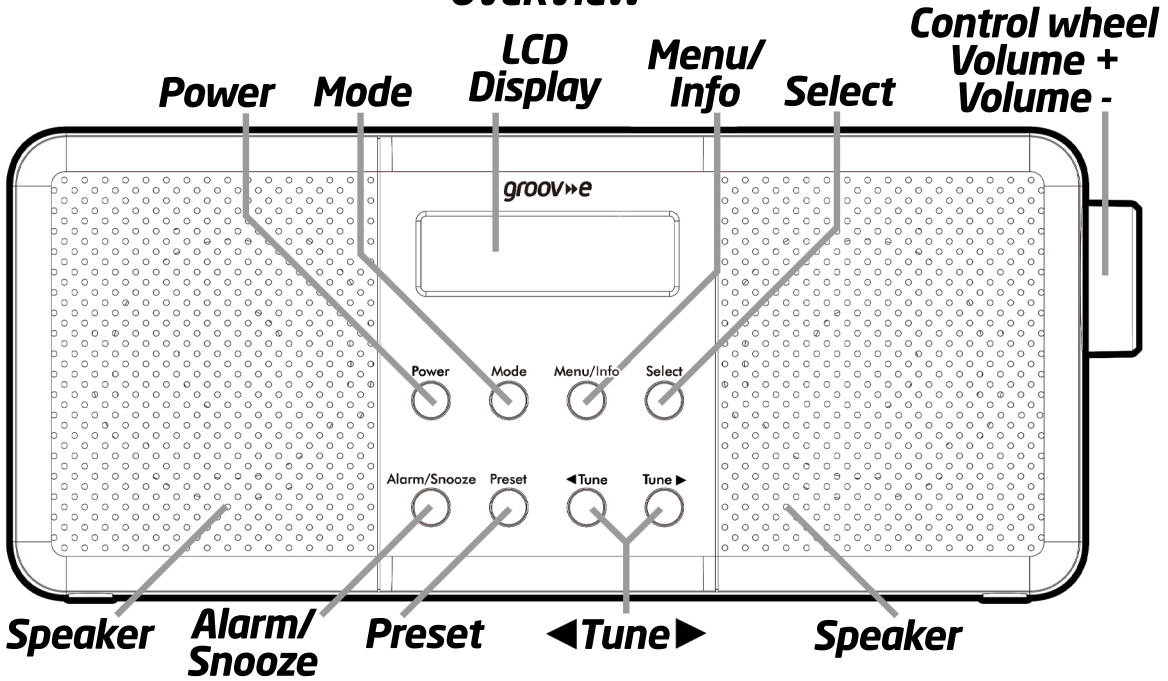

 Fully extend the antenna before you **Telescopic Antenna** scan for DAB or FM stations

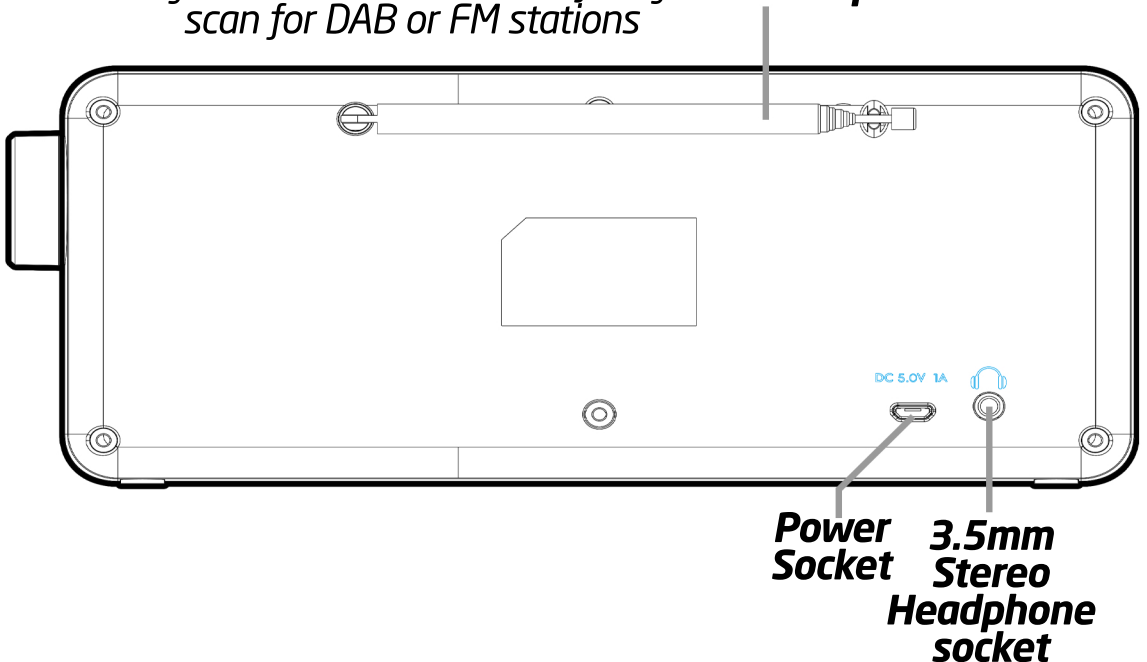

OPERATION

Setting up

- 1. You can use the radio immediately by plugging the Micro USB end of charging cable (supplied) into the Micro USB socket on the back of the radio and the other end USB-A into a suitable USB wall charger or other suitable power source such as a laptop.*
- 2. If you are wishing to use the Radio cable free ie. utilising the built in battery pack you must firstly fully charge the radio for approximately 4 hours before use.*

Power On

Long press: *The power button to power on then short press the mode button to change the mode between (DAB/FM/Bluetooth).*

Power Off

Short press: *The power button to power off.*

Using Bluetooth

Pairing the Radio using Bluetooth

- 1. Press the MODE button until you are in BLUETOOTH mode. Your radio will begin searching for Bluetooth devices and "Searching..." is displayed.*
- 2. Enable Bluetooth on your mobile device and search for available Bluetooth connections. Select GV-DR07 from the list. If you are asked for a password, enter 0000.*
- 3. "BT connected" will be displayed on your Radio once it has been paired successfully.*
- 4. Use the Select button to Play / Pause*
- 5. Use the Tune ◀ button to play previous track*
- 6. Use the Tune ▶ button to play Next track*
- 7. Use the rotating volume control for sound levels*

Press and hold the select button for 3 seconds to disconnect from the current device and to search for new device to pair with if required.

OPERATION

DAB RADIO

1. Adjust the antenna to enhance the signal.
2. Press the MODE button until you are in DAB mode. it will begin to search DAB stations automatically or play the station played last time, start searching and the device will automatically synchronize the time and date.
3. You can also press the ◀Tune and Tune▶ buttons to scroll through the available stations and then press Select button to play your chosen station or press the Menu/Info button to enter DAB settings,

DAB SETTINGS

In DAB mode, press and hold the In Menu/Info button to enter DAB settings, then choose between Full Scan, DRC or System using the ◀Tune and Tune▶ buttons.

FULL SCAN

Press and hold Menu/Info button then press the ◀Tune and Tune▶ buttons to find "FULL SCAN" in the menu list

Press "Select" Button to start scanning. Once a scan is completed, the radio returns to playing the previously selected station or station on the station list.

DRC (Dynamic range compression)

Press and hold Menu/Info button then press the ◀Tune and Tune▶ buttons to find "DRC" in the menu list.

Press select to enter, this function reduces the difference between the loudest and quietest audio being broadcast. Effectively, this makes quiet sounds comparatively louder, and loud sounds comparatively quieter, then press ◀Tune and Tune▶ buttons to choose between High, Off and Low and then press select, an Asterix highlights your choice.

SYSTEM

Press and hold Menu/Info button then press the ◀Tune and Tune▶ buttons to find "SYSTEM" in the menu list, then press "select" to enter then press the ◀Tune and Tune▶ buttons to choose from the following options.

- **Sleep** Press "select" to enter then the ◀Tune and Tune▶ buttons to choose between OFF, 15, 30, 45, 60 and 90 minutes press "select" to choose
- **Time** Press "select" to enter then press the ◀Tune and Tune▶ buttons to scroll the options. To set Time/Date press "select" then the ◀Tune and Tune▶ buttons to set Hours then Minutes. To Auto Update Press "select" to enter then press the ◀Tune and Tune▶ buttons to scroll options Update from Any, Update from DAB, update from FM or No update,

OPERATION

- **Set 12/24 Hour** press "select" then ◀ Tune and Tune ▶ buttons to scroll options 12hr or 24hr, then to Set Date Format Press "select" to enter then press the ◀ Tune and Tune ▶ buttons to scroll options either MM-DD-YEAR or DD-MM-YEAR then press "select". Then press Menu/Info button to return to the "System" menu and scroll to Backlight using the ◀ Tune and Tune ▶ buttons.
- **Backlight** Press "select" to enter then press the ◀ Tune and Tune ▶ buttons to choose between Timeout , on level and Dim Level press "select" to choose.
- **Timeout** Press the ◀ Tune and Tune ▶ buttons to choose between On, 10, 20, 30, 45, 60, 90, 120, and 180 then press the ◀ Tune and Tune ▶ buttons to scroll to on level
- **On Level** Use the ◀ Tune and Tune ▶ buttons to choose between "Low Medium or High" then press "select" to choose then press the ◀ Tune and Tune ▶ buttons to scroll to Dim level
- **Dim Level** Use to choose between "Low Medium or High" then press "select" to choose then press the "Menu/Info button to return to the "System" menu and use the ◀ Tune and Tune ▶ buttons to scroll to Language.
- **Language** Press "select" to enter then press the ◀ Tune and Tune ▶ buttons to choose between English, German, Italian and French press "select" to choose then press the ◀ Tune and Tune ▶ buttons to scroll to Factory Reset
- **Factory Reset** Press "select" to enter then press the ◀ Tune and Tune ▶ buttons to choose between YES/NO then press the ◀ Tune and Tune ▶ buttons to scroll to Software Version
- **Software Version** For info only Press "Menu/Info button to return to System Menu

Note: as you go through the possible values, an asterisk (*) appearing to the right-hand side of the display indicates the currently selected value for each setting.

OPERATION

Presets for DAB+ and FM Stations (Storing favourites)

In DAB or FM Mode, simply scroll through the station list by pressing ◀Tune and Tune ▶ buttons and then Press "Select" to tune to that station then press "Preset" for over 3 seconds then press ◀Tune and Tune ▶ buttons to look for an empty location or to overwrite an existing stored station then press "Select" to save to that location, each mode can store up to 20 stations.

RECALLING A PRESET STATION DAB or FM

Choose the correct Mode DAB or FM Press the "Preset" setting button then scroll through the station list by pressing ◀Tune and Tune ▶ buttons then press "Select" to play.

DAB INFO

You can view further information when the unit is working under DAB mode. Press "Menu/Info" Button repeatedly and you can have options including:

- **Frequency**
- **Signal**
- **Signal Strength**
- **Signal Quality**
- **Time**
- **Date**

ALARM 1 SETTING

Press the Alarm/Snooze button Alarm1 Setup will be displayed.

Press "Select" and set the On Time by using the ◀Tune and Tune ▶ buttons to set the hour then press "Select" to confirm and then press the ◀Tune and Tune ▶ button to set the minutes then press "Select" to confirm.

Now choose the Duration Time by using the ◀Tune and Tune ▶ buttons to select from 15, 30, 45, 60, 90 and 120 minutes. then press "Select" to confirm and then press the ◀Tune and Tune ▶ buttons to choose the Alarm Source by using the ◀Tune and Tune ▶ buttons to select between Buzzer, DAB or FM, then press "Select" to confirm (When DAB or FM is selected it will be the last listened to station) and then press the ◀Tune and Tune ▶ buttons to choose the Alarm Occurrence by using the ◀Tune and Tune ▶ buttons to select between Daily, Once, Weekend, or Weekday then press "Select" to confirm and then press the ◀Tune and Tune ▶ buttons. Choose the Alarm Volume. by using the ◀Tune and Tune ▶ buttons to select the volume which will ascend to your selected level then press "Select" to confirm.

Note: There is no STANDBY mode or ALARM function when you are using battery power ensure your radio is plugged into a mains source.

OPERATION

Alarm 2 Setting

Press the Alarm/Snooze button Alarm1 Setup will be displayed then press ◀ Tune and Tune ▶ buttons to scroll between Alarm 1 and Alarm 2 and then press "Select" to choose Alarm 2 to confirm and follow as above.

SNOOZE

When the alarm sounds, press the "Alarm/Snooze " button to keep Snoozing for another 10 minutes.

STOP ALARMS

When the alarm sounds, press the "POWER" button to stop and the radio will go into standby mode.

FM MODE

Press the MODE button until you are in FM Mode

Whilst in FM mode Long Press the Menu/Info button to enter the menu then press ◀ Tune and Tune ▶ buttons scroll between, Scan Settings, Audio Setting, AMS or System. Then press "select" for your preferred option.

SCAN SETTINGS

Use the ◀ Tune and Tune ▶ buttons scroll between All Stations or Strong Stations then press "select" for your preferred option

By default, an FM scan stops at any available station (All stations). This may result in poor quality audio from weak stations.

Press the ◀ Tune and Tune ▶ buttons to go to Audio Settings and choose between Stereo Allowed and forced mono using the ◀ Tune and Tune ▶ buttons and "Select" to confirm.

Then press the ◀ Tune and Tune ▶ buttons to go to AMS press "select" and the FM scan will begin.

Now press and hold the Menu/Info button and using the ◀ Tune and Tune ▶ buttons to scroll to the System menu and press "select" to enter.

- **Sleep** Press "select" to enter then the ◀ Tune and Tune ▶ buttons to choose between OFF, 15, 30, 45, 60 and 90 minutes press "select" to choose
- **Time** Press "select" to enter then press the ◀ Tune and Tune ▶ buttons to scroll the options. To set Time/Date press "select" then the ◀ Tune and Tune ▶ buttons to set Hours then Minutes. To Auto Update Press "select" to enter then press the ◀ Tune and Tune ▶ buttons to scroll options Update from Any, Update from DAB, update from FM or No update,

OPERATION

- **Set 12/24 Hour** Press "select" then ◀Tune and Tune▶ buttons to scroll options 12hr or 24hr, then to Set Date Format Press "select" to enter then press the ◀Tune and Tune▶ buttons to scroll options either MM-DD-YEAR or DD-MM-YEAR then press "select". Then press Menu/Info button to return to the "System" menu and scroll to Backlight using the ◀Tune and Tune▶ buttons.
- **Backlight** Press "select" to enter then press the ◀Tune and Tune▶ buttons to choose between Timeout, on level and Dim Level press "select" to choose.
- **Timeout** Press the ◀Tune and Tune▶ buttons to choose between On, 10, 20, 30, 45, 60, 90, 120, and 180 then press the ◀Tune and Tune▶ buttons to scroll to on level.
- **On Level** Use the ◀Tune and Tune▶ buttons to choose between "Low, Medium or High" then press "select" to choose then press the ◀Tune and Tune▶ buttons to scroll to Dim level.
- **Dim Level** Use to choose between "Low, Medium or High" then press "select" to choose then press the "Menu/Info button to return to the "System" menu and use the ◀Tune and Tune▶ buttons to scroll to Language.
- **Language** Press "select" to enter then press the ◀Tune and Tune▶ buttons to choose between English, German, Italian and French press "select" to choose then press the ◀Tune and Tune▶ buttons to scroll to Factory Reset.
- **Factory Reset** Press "select" to enter then press the ◀Tune and Tune▶ buttons to choose between YES/NO then press the ◀Tune and Tune▶ buttons to scroll to Software Version.
- **Software Version** For info only Press the Menu/Info button to return to System Menu

Note: as you go through the possible values, an asterisk (*) appearing to the right-hand side of the display indicates the currently selected value for each setting.

FM INFO

You can view further information when the unit is working under FM mode. Press "Menu/Info" Button repeatedly and you can have options including:

- Radio Text
- PTY (Programme Type)
- Frequency
- Time
- Date

OPERATION

No Power?

*The Power switch is set to OFF, Set the Power switch to the ON
Battery is flat, Recharge the battery or use mains power.*

Station not found/Weak signal

Station not available in your area Use the manual tune function.

The display is blank

This may occur if the broadcaster changes the label of a service or removes a label while tuned. The unit will try re-tune. If not, perform a new scan.

Noise on some stations

Battery power is low weak signal Recharge the battery or use mains power. Try re-positioning the antenna.

No sound

Volume may be set to minimum, Increase the volume.

FEATURES

- **DAB/ FM radio**
- **Stereo Speakers**
- **40 preset stations: 20 DAB & 20 FM**
- **Bluetooth connectivity for wireless music playback**
- **Rechargeable battery 1800mAh**
- **Backlit LCD display**
- **Radio text**
- **Auto scan and manual tuning**
- **Clock - time and date**
- Dual alarm - wake up to radio or buzzer**
- **Snooze function**
- **Sleep timer**
- **Display dimmer**
- **3.5mm headphone socket**
- **Telescopic antenna**
- **Micro-USB power/charging cable (included)**



 
DAB/FM Radio
(40 Presets)



Bluetooth
Connectivity



Stereo
Speakers

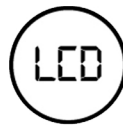

LCD
Display



Alarm
Clock



Rechargeable
Battery

Technical specification:

Frequency range:

DAB: 174 MHz to 240 MHz

FM: 87.5 MHz to 108 MHz

Input DC: 5.0v 1.0A

Bluetooth Version: 5.0

Pairing Name: GV-DR07

Bluetooth Frequency Range: 2.4GHz - 2.480GHz

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with you Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) *Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.*

2) *This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.*

3) This Guarantee Excludes:

(i) *All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.*

(ii) *Alterations or adjustments made to equipment*

(iii) *Loss of data resultant from malfunction of hard drive or other storage device*

(iv) *Damage caused to any third party device as a result of using the product*

4) *No liability under this guarantee shall be incurred:*

(i) *In respect of damage or loss occurring during transit to or from the purchaser*

(ii) *Where the serial number plate of the equipment has been removed or altered in any way.*

5) *Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.*

6) *The cost of carriage to and from Groov-e shall be borne by the purchaser.*

7) *This guarantee is personal to the original purchaser and is not transferable.*

8) *If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.*

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov»e
Unit J
Braintree Road
Braintree Industrial Estate
Ruislip
Middlesex
HA4 0EJ

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Authorised EU Representative
Rashmian EU Ltd
Robwyn House
Suite 3E
Corrintra
Castleblayney
Co. Monaghan
Ireland

Register your purchase for extended warranty
www.groov-e.co.uk/warranty

Made in China