

groov>e

GV-PS8 Pop
8GB Personal MP3
Player



User Manual

MP³
AUDIO

Pop



30 Day Right To Return

We do not envisage any problems occurring with your Groov-e GV-PS8 Personal MP3 Player. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with your proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase. In the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Contact Us

Reach out to us at **info@groov-e.co.uk** or visit **www.groov-e.co.uk**

***"Congratulations** on your purchase and **Thank You** for choosing the Groov-e GV-PS8 Personal MP3 Player. Please read the guide carefully before using."*

SAFETY INSTRUCTIONS

- 1.** *Avoid serious impact to the device.*
- 2.** *Keep the device away from solvents.*
- 3.** *Avoid strong magnetic or electrical fields.*
- 4.** *Keep the device out of direct sunlight and away from heat sources.*
- 5.** *Do not try to disassemble, repair, or modify the device.*
- 6.** *Do not use earphones whilst driving.*




To prevent possible hearing damage, do not listen at high volume levels for long periods.

OVERVIEW

BOX CONTENTS:

- MP3 Player 1 *pc
- Micro USB
- Cable 1*pc
- Earphones *1pc
- Instruction
- Manual 1*pc

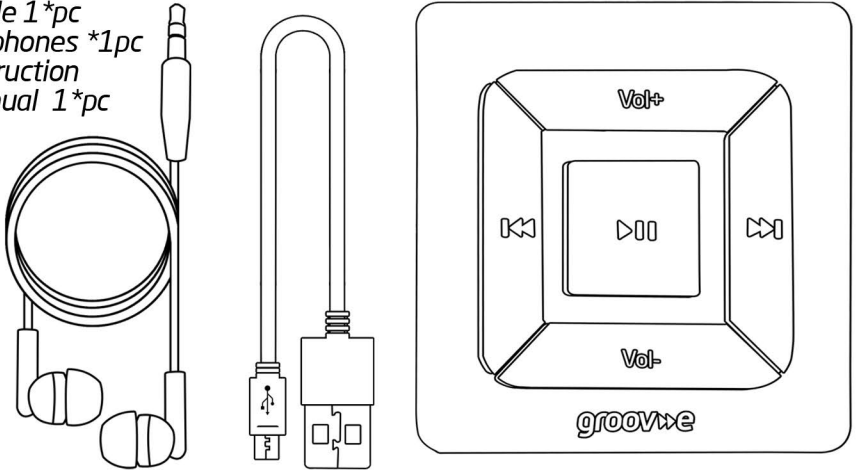

**PLAY/PAUSE
BOOKMARK**

**VOLUME
BUTTONS**

**POWER SWITCH
SHUFFLE/OFF/ON**

**LED
INDICATOR**

**MICRO USB
PORT**

for charging and
downloading music

**PREVIOUS TRACK/
REWIND**

Short press for previous
track. long press for
fast rewind.

**NEXT TRACK/
FAST FORWARD**

Short press for next
track. long press for
fast forward.

**3.5mm
Earphone
Jack**


OPERATION

CHARGING

Connect the Micro USB cable to the Micro USB Port on the unit and the other end to a USB charger or USB port on a PC. The red LED Indicator light will stay on whilst charging and turn off once fully charged.

TURN ON/OFF

Slide the power switch to the **ON** position to turn on the device. To turn off slide the power switch to the **OFF** position.

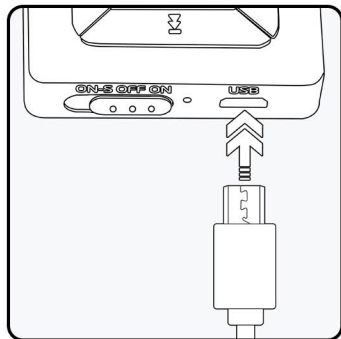

PLAY MUSIC

Slide the power switch to the **ON** position, the device will turn on and enter music playing mode (The led indicator light flashes blue).

BOOKMARK FUNCTION

To bookmark the music, long press **PLAY/PAUSE** during playback. The unit will enter standby mode to conserve power. To exit standby mode long press the **PLAY/PAUSE** button. The music will continue from where it was stopped. To release bookmark function, switch the unit off.

SHUFFLE MUSIC

Slide the power switch to **ON-S**. Music tracks will playback in a random order.

CONNECTING TO A PC

With the device turned **ON**, use the Micro USB cable provided to connect to a PC's USB port. The computer should recognise the MP3 Player as an external storage device. Go to "my computer" and the device "MP01-FW01" you can copy files or music on to the MP3's internal memory.

PC SYSTEM REQUIREMENTS

Operating System: Windows 98/7/8/10/ME/2K/XP/Vista/Linux 9/Linux 6.2/ Mac OS 10

CPU: at least Pentium 133MHz

RAM: at least 32MB

DISK SPACE: at least 100MB

USB Port

TROUBLESHOOTING

1. Device fails to turn on

Please check whether the battery has run out of power, connect it to a PC or charger and try the power button again.

2. No sound from earphones

Make sure the volume level is not too low and that the earphones jack is fully inserted.

3. Sound Issues

Please make sure the earphone jack is clean and correctly inserted. Check whether the music file is corrupted. You can try other music to confirm this.

4. Unable to Download files

Please check the connection between the device and the PC. Check the storage space left on the device to make sure the memory is not full. Check the USB cable for damage.

LED INDICATOR

DEVICE STATUS	LED INDICATOR ACTION
PAUSED	Blue LED stays ON
PLAY MUSIC	Blue LED flashes slowly
LOW BATTERY	Blue LED Flashes quickly
CHARGING	Red LED stays on and turns off when charged

SPECIFICATIONS

Battery: 280mAh Lithium Polymer 3.7V

ROM: 8GB Nano Flash

USB: Micro USB 5 Pin. USB 2.0 High Speed Transfer, USB Charging

AUDIO SPECIFICATION

Max Audio Jack Output: (L) 10mW + (R) 10mW (32 Ohm)

L/R: 20Hz-20KHz

SUPPORT MUSIC FORMAT: MP3/WMA

ENVIRONMENTAL TEMPERATURE: -40°C +60°C

SUPPORT OS: Windows 98/7/10/ME/2K/XP/Vista/Linux 9/Linux 6.2/ MAC OS

10



8GB
Memory



6hrs Music
Playback



2000
Songs



Rechargeable
Battery



Earphones
Included

BATTERY REMOVAL/DISPOSAL

This product contains batteries which cannot be disposed of with normal household waste. Doing so may harm the environment. Please find out from your local authority about separate collections for batteries because correct disposal helps to prevent damage to the environment and health. Should this product develop a fault or your battery needs replacing, or for further advice and information on how to safely remove your battery, please visit our website at www.groov-e.co.uk. You can contact us via email: info@groov-e.co.uk or via post: Groov-e, Unit J, Braintree Industrial Estate, Braintree Road, Ruislip, HA4 0EJ, UK

ENVIRONMENT PROTECTION

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.



Guarantee

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

- 1)** Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.
- 2)** This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.
- 3) This Guarantee Excludes:**
 - (i)** All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.
 - (ii)** Alterations or adjustments made to equipment
 - (iii)** Loss of data resultant from malfunction of hard drive or other storage device
 - (iv)** Damage caused to any third party device as a result of using the product
- 4) No liability under this guarantee shall be incurred:**
 - (i)** In respect of damage or loss occurring during transit to or from the purchaser
 - (ii)** Where the serial number plate of the equipment has been removed or altered in any way.
- 5)** Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.
- 6)** The cost of carriage to and from Groov-e shall be borne by the purchaser.
- 7)** This guarantee is personal to the original purchaser and is not transferable.
- 8)** If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

groov»e

Unit J

Braintree Road

Braintree Industrial Estate

Ruislip

Middlesex

HA4 0EJ

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8845 7704