

groov▶▶e

***GV-SB05* SOUNDBAR160**

160W All-in-One Bluetooth Soundbar
with Built-in Subwoofer



 **Bluetooth®**



30 Day Right To Return

We do not envisage any problems occurring with your groov-e GV-SB05 160W All-in-One Bluetooth Soundbar with Built-in Subwoofer. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Extended Warranty

Please register your product within 30 days from date of purchase

www.groov-e.co.uk/warranty

Proof of purchase required.



Contact Us

*Reach out to us at **info@groov-e.co.uk***

*or visit **www.groov-e.co.uk***

"Congratulations on your purchase and **Thank You** for choosing the groov-e **GV-SB05** 160W All-in-One Bluetooth Soundbar with Built-in Subwoofer. Please read the guide carefully before using".

 
 
 
CAUTION

- 1• Keep the product and all its parts out of reach of small children.
- 2• Do NOT leave it in high temperatures as electronic devices and plastic parts may warp in heat. No naked flame sources, such as lighted candles, should be placed on the product.
- 3• Do NOT leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.
- 4• Do NOT attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- 5• Disconnect your Soundbar from the mains power supply during thunderstorms.
- 6• Always check that you have completely switched off your Soundbar, before you change or disconnect the power supply.
- 7• Never throw batteries in a fire or attempt to open the outer casing. Batteries should not be exposed to excessive heat such as sunshine, fire or the like. Dispose of old batteries carefully.
- 8• Batteries are harmful if swallowed, so keep away from young children.

Box Contents



- GV-SB05 Soundbar x 1
- Remote Control x 1
- Power Adapter x 1
- Optical Cable x 1
- User Manual x1

OVERVIEW

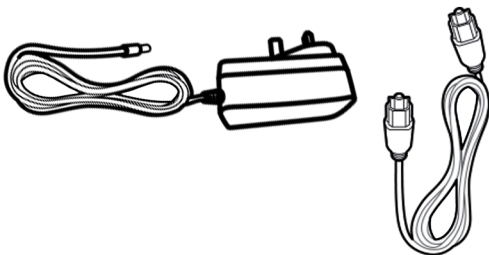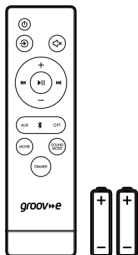


Functions

  TOP VIEW

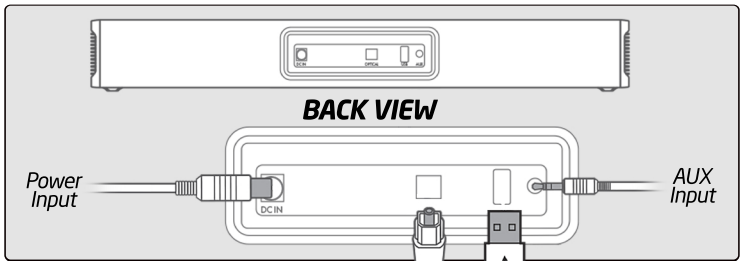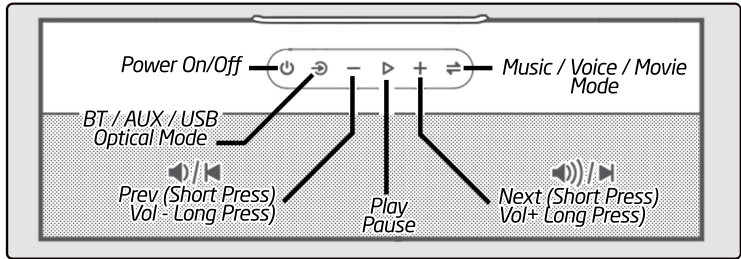


Inserting Remote Batteries

 
1. Slide open battery cover

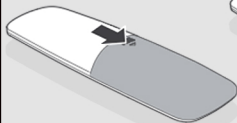

 
2. Insert AAA batteries

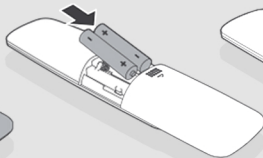

 3. Close battery cover

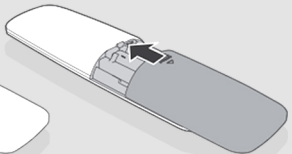

Remote Buttons

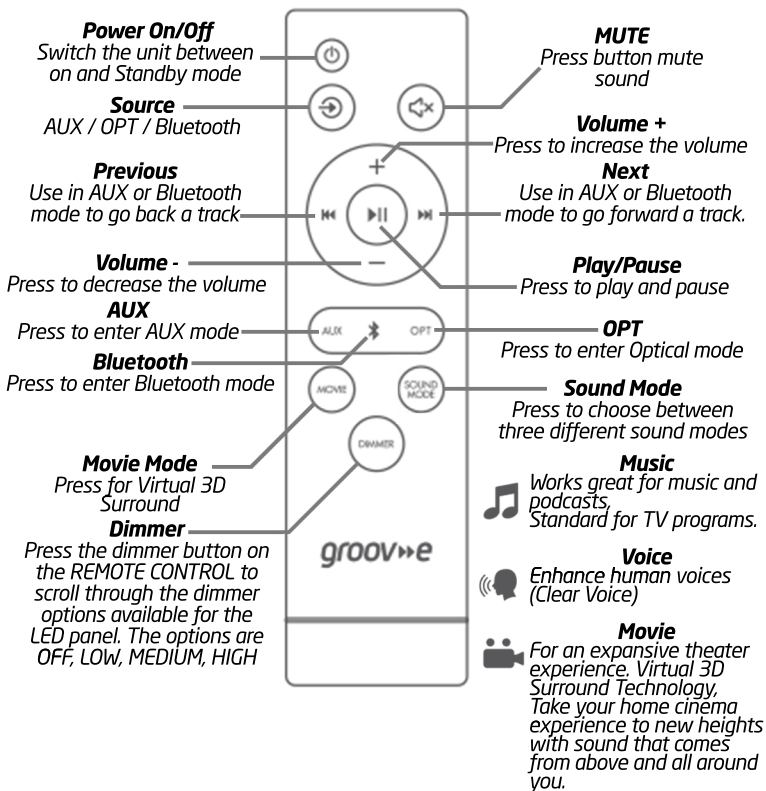 


Using the Remote Control

The remote control sensor at the front of the soundbar is sensitive to the remote control's commands up to a maximum of 8 metres away and within a maximum arc of 30 degrees. Please note that the operating distance may vary depending on the brightness of the room.

Instructions


Connecting to the mains supply

 Ensure that the power supply voltage is in the voltage of 110V~240V. This unit is designed to use the supplied adapter only. Connecting the unit to any other power source may cause damage to the unit. Unwind the mains cable to its full length. Connect the mains plug to a mains socket. Make sure the mains plug is fully inserted into the mains socket. Connect the adapter to the unit via the DCinput Socket. (DC-20V-IN)

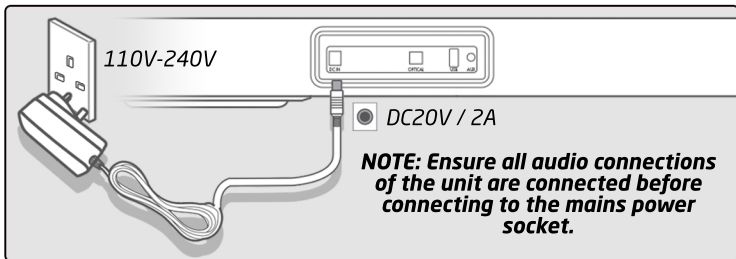

Using the Bluetooth

 
Pairing a Bluetooth Device for the First Time. Press the **POWER** button on the unit or the **POWER** button on the remote control to switch on the unit. Press Bluetooth button on the remote to enter Bluetooth pairing mode. Using the controls on your Bluetooth device, select the "**GV-SB05**" in your Bluetooth settings to pair. Refer to the user manual for your specific device for instructions on pairing and connecting Bluetooth devices. When successfully paired and connected, a beep will issue from the unit. After initial pairing, the unit will stay paired unless unpaired manually by the user. If your device should become unpaired or you find it is unable to connect, the use repeat the above steps.

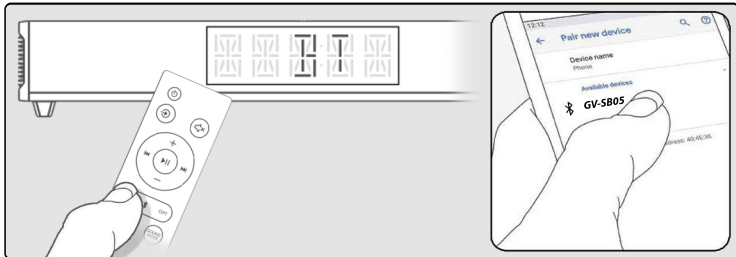

Instructions

Using USB

 
1. Insert a USB drive into the USB port.
2. Press the **Source Mode** button repeatedly on the remote control until USB mode appears on the display. To Play/Pause the track or Skip Forwards/Backwards to a selected track, use the remote control. Audio played through the connected USB device will now be heard.

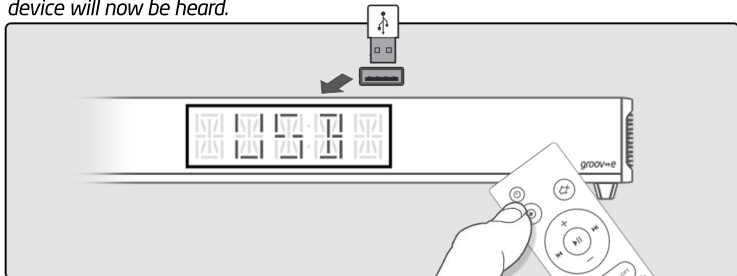

Using Optical Input

You will need: An audio source with an Optical Audio Output and an Optical cable (included).

 
1. Connect the Optical Audio cable to the optical output on the audio source and to the Optical Input on the soundbar. Press the **POWER** button on the soundbar or **POWER** button directly on the remote control to switch on the unit.
2. Press the **OPT** button on the remote control to switch to Optical mode or press the **MODE** button on the main unit press repeatedly to select the Optical mode. Using the controls on your connected device, make sure the audio settings are set to PCM or Audio and are turned On. Audio from the connected audio source will now be played through the speakers.

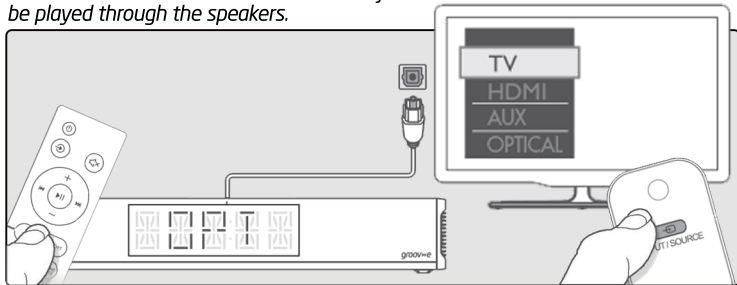

Instructions

Connecting Aux to TV or MP3 Player

 Plug one end of a 3.5mm to 3.5mm Aux In cable (not supplied) into the Aux port on the unit. Then plug the other end of the cable into the audio output on your TV or MP3 player or other audio source. Press the Power button on the soundbar or Power button directly on the remote control to switch on the unit. Press the Mode button repeatedly on the soundbar or remote or press the AUX button on the remote control to enter AUX mode. Audio played through the TV or connected device will now be heard through the speakers.

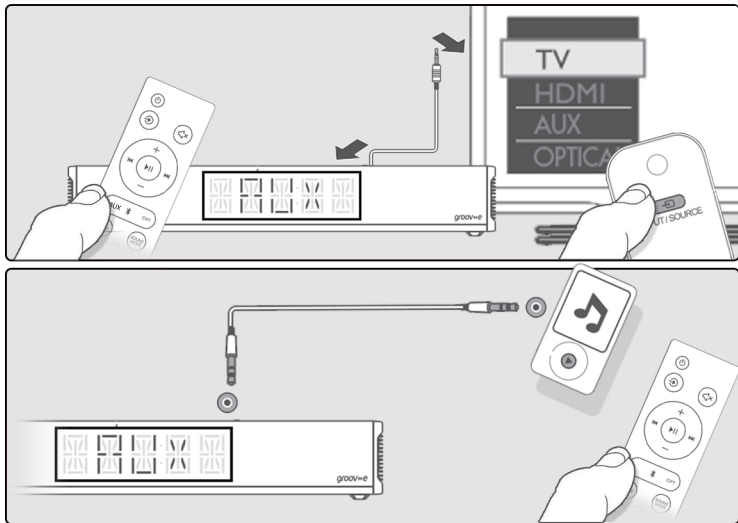

Option For Wall Mounting

If you wish to wall mount the unit, please use Universal Soundbar brackets (not included)

Troubleshooting

If the soundbar does not work properly as desired, please check the following.

Malfunction	Possible Cause/Measures
<i>No power / function</i>	<i>Check whether the power is switched on or off at the wall. Check whether the power adaptor is properly connected to power outlet or not.</i>
<i>No sound</i>	<i>Check whether cables are properly installed. If they are, please try alternative cable to connect to your TV if possible. Check unit is out of standby and in mode.</i>
<i>No sound from Bluetooth connection</i>	<i>Disconnect the soundbar from your device and reconnect.</i>
<i>Function disturbance</i>	<i>Switch off and unplug the unit. Leave it for 2 minutes and switch it on again. If a particular mode is causing problems, please try an alternative connection to your TV such as Optical or Bluetooth.</i>
<i>Remote control does not work [properly]</i>	<i>Check whether the batteries have run out or not. Replace with a new ones if necessary. Check whether there is an obstacle blocking the remotes signal.</i>

FEATURES

- Speakers: 90W RMS power & 160W peak power
- Built-in subwoofer
- 2 x medium-high frequency drivers + 1 x bass driver
- Compatible with most TV's for home theatre sound
- Wireless Bluetooth speaker - connect to your TV, PC, Laptop, Computer, Smartphone, Tablet
- LED display panel
- Crisp & clear sound with deep base
- 3 sound modes (Music, Movie, Voice)
- Easy controls
- 4 Input modes: Optical, USB, AUX (3.5mm), Bluetooth
- 1.5M Optical cable (included)
- Remote control (included) -requires 2 x AAA batteries (included)



160W
Power



Built-in
Subwoofer



Bluetooth
Connectivity



Super
Bass



Remote
Control



Optical Cable
Included

BATTERY REMOVAL/DISPOSAL

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

Never throw batteries into a fire or attempt to open the outer casing. Should your product develop a fault and your battery needs replacing for further advice on how to safely remove your battery please visit our website at www.groov-e.co.uk

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.

Check with you Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at:

groov»e

Unit J

Braintree Industrial Estate

Braintree Road

Ruislip

Middlesex

HA4 0EJ UK

Authorised EU Representative

Rashmian EU Ltd

Robwyn House

Suite 3E

Corrintra

Castleblayney

Co. Monaghan

Ireland

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty

www.groov-e.co.uk/warranty