

groov▶▶e

GV-WC01 *Athena*

Alarm Clock with Wireless charging
& Night Light



User Manual

www.groov-e.co.uk

30 Day Right To Return



We do not envisage any problems occurring with your Groov-e GV-WC01 Athena. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with your proof of purchase for an exchange or refund.

12 Month Guarantee



This product is guaranteed for twelve months.

Please retain your receipt as this will be required as proof of purchase, in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Contact Us

 
Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk

“Congratulations on your purchase and ***Thank You*** for choosing the Groov-e GV-WC01 Athena. Please read the guide carefully before using.”


Important safety information

- 1. Keep the adapter and product dry.***
- 2. Do not let water run into the appliance or spill water onto the appliance or adapter.***
- 3. This appliance is for indoor use only.***
- 4. Only use the appliance in combination with the adapter supplier.***
- 5. Place the appliance on a stable, level and non-slippery surface.***
- 6. Do not disassemble the product in case of electrical shock***
- 7. Do not use the product at room temperatures lower than 10C or higher than 35C.***
- 8. Never use the product if the lamp house or LED screen is damaged, broken or missing.***
- 9. Do not impair the light function of the product by covering it with items such as blankets clothing, papers, etc.***

OVERVIEW

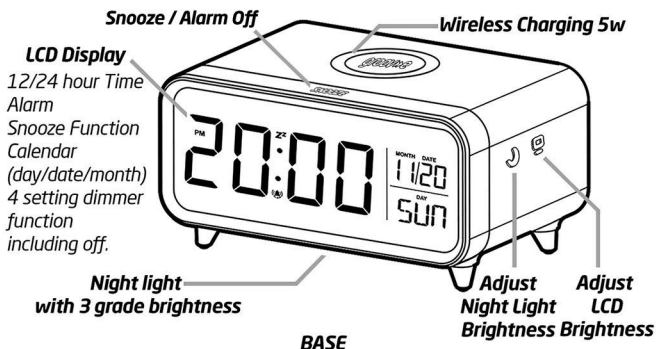

 
Back-Up Battery
The unit contains a back-up battery to remember time settings. To use this, remove the tab in the backup battery compartment by pulling it away

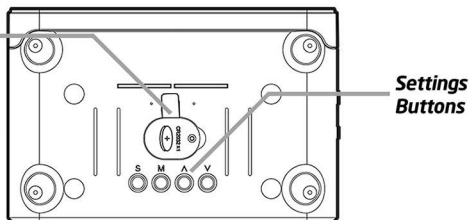

Operating Instructions

Power supply setting

 please plug in the adaptor. The LCD screen will light on automatically and a beeping sound will occur.

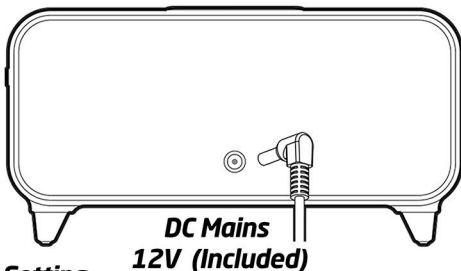

Clock Setting


Press "S" on the underside of the Athena to enter the settings mode. The hour digits will flash press \wedge or \vee to adjust the hour and then press S again to confirm, repeat the same for the Minutes Year Month and date, day will be automatic.

12/24 Hour Display

Press \wedge on the underside of the Athena to toggle between 12/24 Hour modes

Brightness Setting

To adjust the brightness of the LCD screen, touch . There are 4 dimmer settings on the LCD: Off, Low, Medium, High.

To adjust the brightness of the night light, touch . There are 3 grades of brightness: low, medium, high.

Alarm Clock Setting

On the bottom panel of the product, press the **"M"** button to enter the alarm setting. The alarm time will be displayed.

Press **"S"** to enter the alarm setting.
The hour display will flash - use the **"Λ/V"** to adjust the time needed for your alarm.

Press **"S"** to enter the minute setting and adjust as needed.

Press **"S"** once again to enter the snooze time. You are now able to adjust the snooze time up to a maximum of 30 minutes (select between 5, 10, 15, 20, 25, 30 minutes).

To switch on the alarm press - **"Λ/V"** the LCD display will show  (on) or  (off). Finally Press **"M"** to exit the alarm settings.

Using Snooze and Switching Off the Alarm

When the alarm is active, touch/tap **"SNOOZE"** to activate snooze. A **"Zzz"** will appear on the LCD display.

 
When in snooze mode **"Zzz"**, touch/tap **"SNOOZE"** again. The **"Zzz"** will disappear, snooze will be switched off and your alarm will be activated for the same time the next day.

In addition to pressing **"SNOOZE"** twice to switch off your alarm for that day, you are also able to press the **"S"** **"M"** or **"Λ/V"** when the alarm is ringing.

To deactivate your alarm, go back into Alarm Mode settings and press **"Λ/V"** buttons until icon is shown as .

Wireless Charging

To enable wireless charging, ensure the product is powered on by connecting the DC input. Put your wireless charging enabled device on the charging pad.

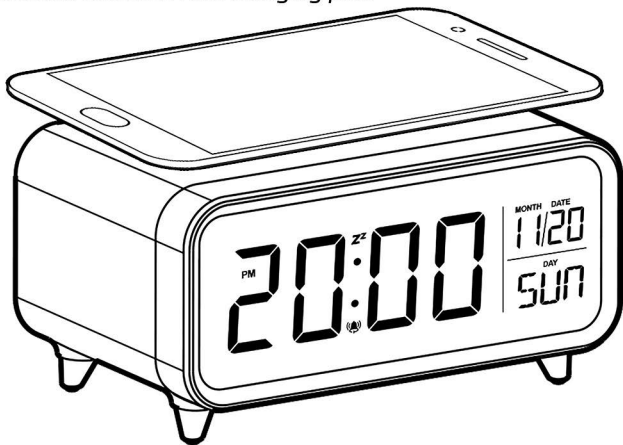

Your device will start charging and a red light illuminates on the display screen to confirm, which then changes to green when your device is fully charged. The output rate for charging is 5W. For optimum charging, ensure the device is placed directly on to the charging pad.

Note: For wireless charging your device/smartphone needs to be a wireless charging enabled device.

FEATURES

- **Wireless charging 5W - Charge your wireless enabled device**
- **LCD display**
- **Dimmer function - 4 settings**
- **Night light - 3 settings**
- **Touch control**
- **12/24 hour clock**
- **Beep alarm**
- **Snooze function**
- **Calendar - day/date/month**
- **DC mains 12V (included)**



Wireless
Charging (5W)



LCD
Display



Dimmer
Function



Night
Light



Touch
Control

SPECIFICATIONS

Adaptor: 12V / 1A Wireless Charging

Output: 5V/1A (5W)

Colour Temperature: 3000K +/- 280K

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Guarantee

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

Guarantee

5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at.

groov»e

Unit J

Braintree Road

Braintree Industrial Estate

Ruislip

Middlesex

HA4 0EJ

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8845 7704

Made in China