

groov▶▶e

GV-WC04 Ares



User Manual

LED Desk Lamp with Wireless
Charging Pad & Clock

www.groov-e.co.uk

30 Day Right To Return



We do not envisage any problems occurring with your Groov-e GV-CR04 Ares. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with your proof of purchase for an exchange or refund.

12 Month Guarantee



This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase, in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk


"Congratulations on your purchase and **Thank You** for choosing the Groov-e GV-CR04 Ares. Please read the guide carefully before using."

Important safety information

Read this important information carefully before you use the appliance and save it for future reference.

- 1.** *Keep the adapter and product dry.*
- 2.** *Do not let water run into the appliance or spill water onto the appliance or adapter.*
- 3.** *This appliance is for indoor use only.*
- 4.** *Only use the appliance in combination with the adapter supplier.*
- 5.** *Place the appliance on a stable, level and non-slipper surface.*
- 6.** *Do not disassemble the product in case of electrical shock*
- 7.** *Do not use the product at room temperatures lower than 10C or higher than 35C.*
- 8.** *Never use the product if the lamp house or LED screen is damaged, broken or missing.*
- 9.** *Do not impair the light function of the product by covering it with items such as blankets clothing, papers, etc.*


OVERVIEW

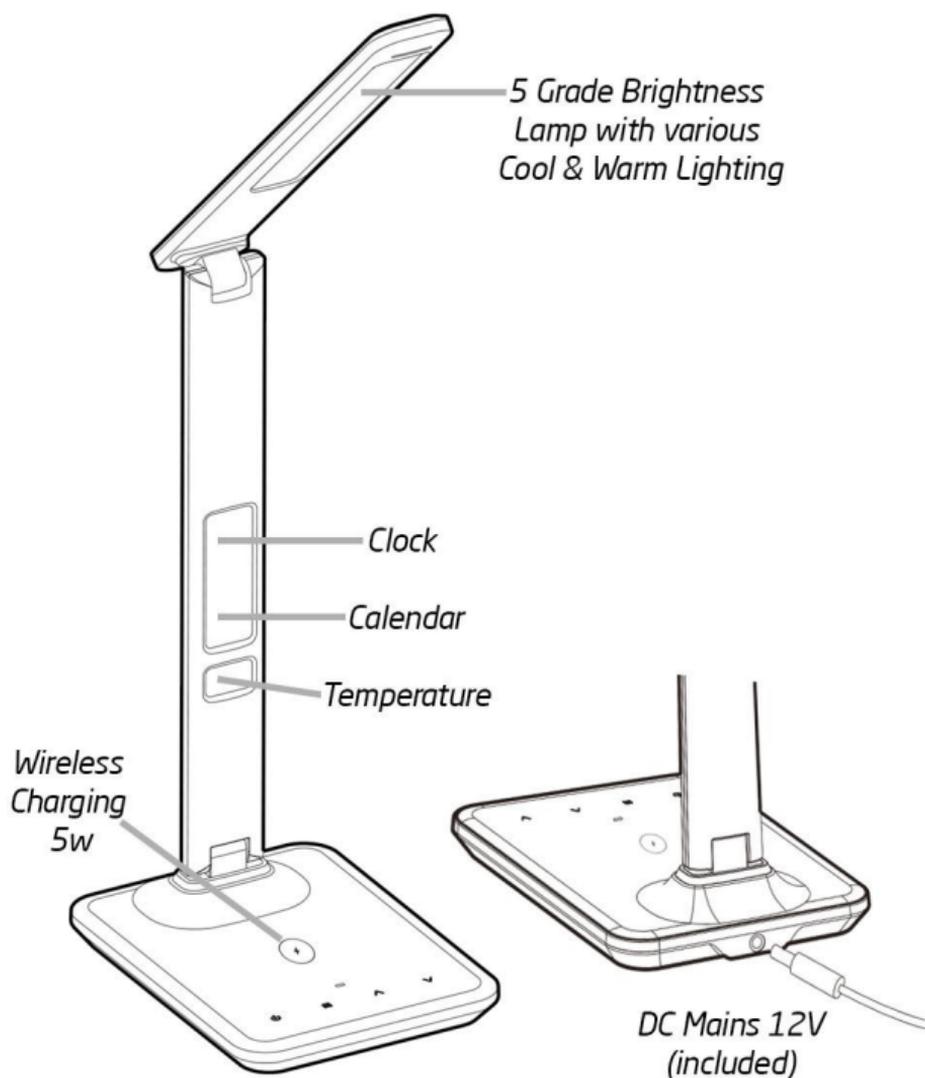

Operating Instructions

LED Lamp

The Ares has 3 different light modes, each with a 5 grade brightness setting. The lamp has a 2 part foldable arm and can be positioned in various settings to achieve the correct light setting for you.

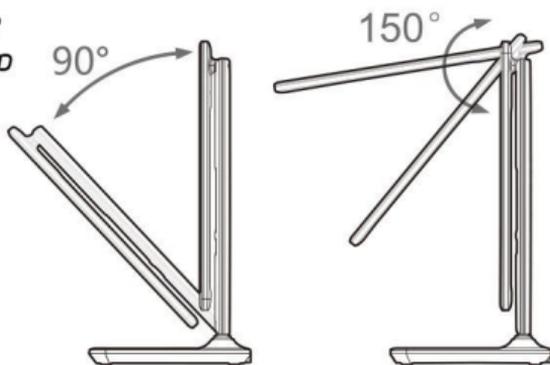


The front buttons operate the lamp


**Power
Button**


**Light
Mode**


UP


DOWN

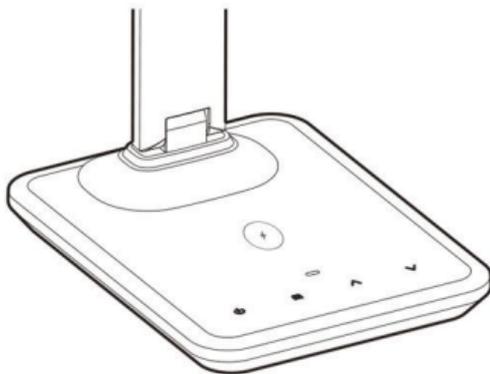


Switch on the lamp using the power button  and scroll through the 3 various light modes  until you find a light mode you wish to use. Each light mode can be adjusted in brightness by tapping the  /  buttons, with every mode having 5 gradings.

Operating Instructions

Clock, Calendar & Temperature Settings

The 5 buttons at the back of the lamp operate the clock, calendar and alarm function.

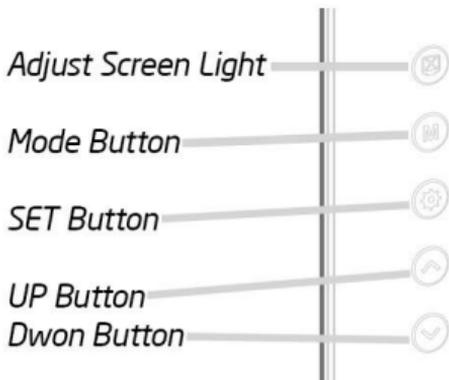

Adjust Screen Light

Mode Button

SET Button

UP Button

Dwon Button

Setting Date & Time


Press the Set button. The hour hand will flash.

Use the \wedge / \vee buttons to achieve the correct hour for the time, then press the  Button to adjust the minute, again for the year, month and date.

After adjusting the date, press  one last time to confirm your actions. You can also press the **M** button to exit settings at any point when you are adjusting the functionality as above.

Once you are out of the setting mode, you may adjust the clock to a 24 hour clock by pressing the \wedge button.

Similarly, the temperature can be adjusted between Celsius and Fahrenheit by pressing the \vee button.

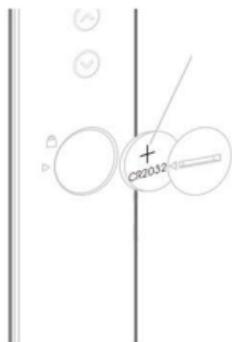

Replacement Back-Up Battery

The Ares lamp has a replacement back up battery at the back of the lamp which will keep the time on your clock in case of a power cut. To activate, please remove the plastic tab by pulling it down. If you need to replace the battery, turn the cover and replace and insert the new battery (CR2032). Push and twist the cover back on.

Adjust Screen Light

Press the  button to adjust the brightness of the screen. There are 3 settings: low, medium, high.

Operating Instructions

Setting Your Alarm

To set the alarm, press the "M" button. An alarm symbol will appear on the display along with the current alarm time.

Press the  button after each of these functions to set your alarm. Use the  /  buttons to make the adjustment needed for each function.

Hour - set the hour needed for your alarm

Minute - set the minute needed for your alarm

Snooze - Choose between 1-60 minutes snooze time.

Music - Choose between 8 different types of musical tunes/alarms.

Press the  button to exit once you have chosen the music for your alarm. You have now exited the setting mode.

Use the  /  buttons whilst in the alarm screen to choose to switch on the alarm  and/or Snooze **ZZZ**.

Press "M" button to exit the alarm mode.

When the alarm rings, use any of the buttons at the back of the lamp to switch off the alarm. It will automatically be set for the next day at the same time.

If you have used SNOOZE, press any button on the back of the lamp. The alarm will then ring again after the set snooze time (**ZZZ** will be flashing on the screen during this time). This occurrence will happen a total of 2 times, before the alarm is switched off and set for the next day.

To switch off your alarm or snooze, go back into Alarm mode by pressing "M" and use the  /  buttons to switch off Alarm and/or Snooze.


Operating Instructions

Wireless Charging

To enable wireless charging, ensure the product is powered by connecting the DC input.

Note: You do not need to switch on the power button  to enable wireless charging.

Place your wireless charging enabled device on the charging pad.

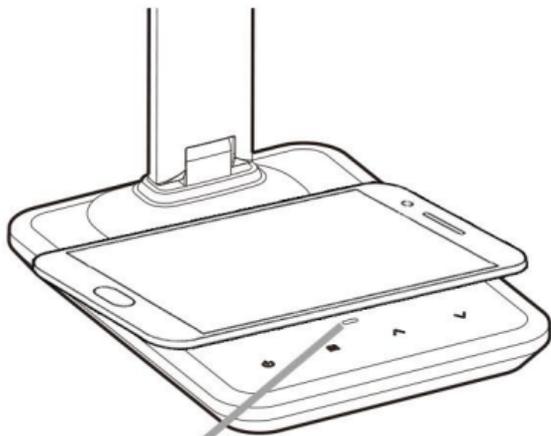

The light indicator on the front of the panel will go red

Your device will start charging. When the light indicator goes green, it means your device is fully charged.

The output rate for charging is 5W. For optimum charging, ensure the device is placed directly on to the charging pad.

Note: only devices with wireless charging capabilities can be charged using the wireless charging pad.

SPECIFICATIONS

Wireless charger 5W - charge your wireless enabled device

Long-life energy saving LED's

3 LED modes - warm, warm white, cool

LED Brightness

-cool light > 250 lumens

-warm light > 150 lumens

-warm and cool light > 400 lumens

LED Lifespan: 15,000 hours

Dimmer function - 5 variable settings in each light mode

Touch control

Clock & Calendar

Alarm

Temperature Display

Folding design

Faux leather finish

Ideal for any room in the house or office

DC mains 12V (included)



Wireless
Charging (5W)



LED Lamp
3 Light Modes



Dimmer
Function



Touch
Control




Folding
Design

Environment Protection

Waste electrical products should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice.

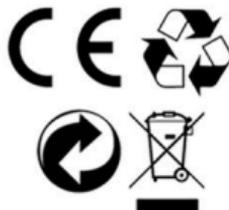

Guarantee

Subject to the conditions stated below, Groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact Groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) Groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from Groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

Guarantee

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

DECLARATION OF CONFORMANCE

Groov-e hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be requested from us at.

groov>e

Unit J

Braintree Road

Braintree Industrial Estate

Ruislip

Middlesex

HA4 0EJ

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8845 7704