





PORTABLE BLUETOOTH KARAOKE BOOMBOX

GV-PS923

User Guide

Important Safety Instructions

1. **WARNING** : Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
2. **WARNING** : To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
3. **WARNING**: The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
4. **WARNING**: The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
5.  Invisible laser radiation when open and interlocks defeated. Avoid exposure to beam of laser.
6.  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU.
7. No naked flame sources, such as lighted candles, should be placed on the apparatus.
8. Attention should be drawn to environmental aspects of battery disposal.
9. Use of the apparatus in moderate climates.
10. The rating and marking information are located at the bottom of the unit.

CAUTION

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type

CLASS 1 LASER PRODUCT
KLASS 1 LASER APPARAT
LUOKEN 1 LAISERLAITE
KLASSE 1 LASER PRODUKT

CLASS 1 LASER PRODUCT LABEL -

This label is attached to the place as illustrated to inform that the apparatus contains a laser component.



1. **READ INSTRUCTIONS** - All the safety and operating instructions should be read before the appliance is operated.
2. **RETAIN INSTRUCTIONS** - The safety and operating instruction should be retained for future reference.
3. **HEED WARNINGS** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **FOLLOW INSTRUCTIONS** - All operating instructions should be followed.
5. **WATER AND MOISTURE** - The appliance should not be used near water, for example, near a bathtub, washbowl, Kitchen sink, landrytub, swimming pool or in a wet basement
6. **VENTILATION** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not place on bed, sofa, rug or similar surface that may block the ventilation openings, in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
7. **HEAT** - The appliance should be situated away from heat sources such as radiators, stoves, or other appliances (including amplifiers) that produce heat.
8. **POWER SOURCE** - The appliance should be connected to power supply only of the type described in the operating instructions or as marked on the appliance.
9. **POWER CORD PROTECTION** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
10. **OBJECT and LIQUID ENTRY** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
11. **ESD WARNING** - The display does not function properly or no reaction to operation of any the control may due to the electrostatic discharge. Switch off and unplug the set. Reconnect after a few seconds.
12. **DAMAGE REQUIRING SERVICE** - The appliance should be serviced by qualified service personnel when:
 - a. The power-supply cord or plug has been damaged.
 - b. Objects have fallen into, or liquid has been spilled into the appliance enclosure.
 - c. The appliance has been exposed to rain.
 - d. The appliance has been dropped, or the enclosure damaged.
 - e. The appliance does not appear to operate normally.
13. **SERVICING** - The user should not attempt to service the appliance beyond that described in the user operating instructions. All other servicing should be referred to qualified service personnel.

Notes:

- a. Dirty or scratched CD may cause a skipping problem. Clean or replace the CD.
- b. If an error display or malfunction occurs, disconnect the AC cord and remove all the batteries. Then turn the power back on.

BEFORE OPERATION

Notes: CONCERNING COMPACT DISCS.

Since dirty, damaged or warped discs may damage the appliance, care should be taken of the followings items:

- a. Usable compact discs. Use only compact disc with the mark shown below.
- b. CD compact disc only with digital audio signals.



TO PREVENT FIRE OR SHOCK HAZARD DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

WARNING: DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD.

WARNING LABEL INFORMING OF RADIATION -

 
This label is placed inside the unit. As shown in the illustration. To warn against further measures on the unit. The equipment contains a laser radiating laser rays according to the limit of laser product of class 1.

FEATURES


- Bluetooth
- CD player: CD, CD-R/RW
- Karaoke: CD+G
- 2 digit red LED display
- Automatic voice control
- Echo control
- Microphone volume control
- Top-load disc player
- Repeat 1 or ALL play
- LED light effect
- Composite video output
- 2 microphone inputs
- RCA stereo audio outputs
- Analog volume control
- Built-in speaker
- Carry handle
- AC power: requires AC power cable (included)
- DC battery power: requires 6 C sized batteries (not included)

INCLUDES

- Microphone x 2
- RCA audio/video cable x 1 set
- AC power cable x 1
- CD+G Disc x 1

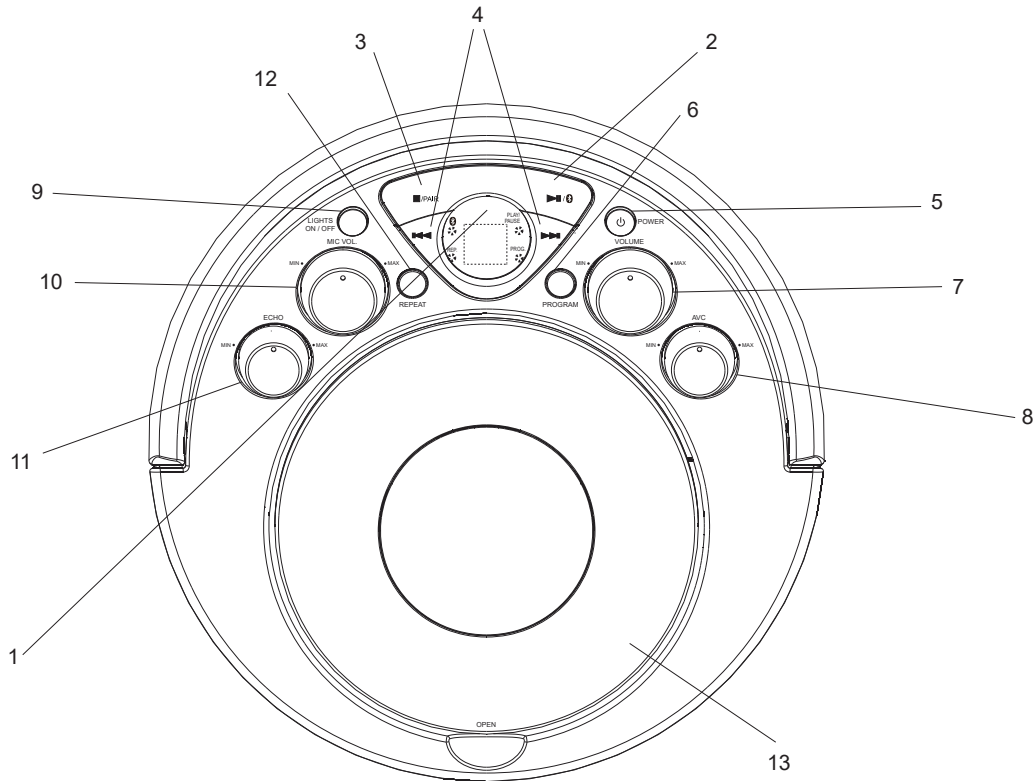


- | | | |
|--|---|---|
| <p>1. Display</p> <p>2. Play/Pause/Bluetooth logo
*Press & Hold seconds to change CD+G or Bluetooth model
*Press to play or pause a loaded disc</p> <p>3. Stop/Pair
*Press to stop a disc during play
*Press & Hold seconds to find and fair the Bluetooth source</p> <p>4. Skip/Search
*Press to skip between tracks on a loaded disc.
*Press & hold to fast-forward or fast-rewind the current track on a loaded CD
*Note: Fast forward and rewind will not work with CD+G</p> | <p>5. Power
*Press to turn the unit on or off</p> <p>6. Program
*Press to program a loaded disc to play tracks in a specified order</p> <p>7. Master Volume
*Turn to adjust the master volume</p> <p>8. AVC
*Turn to adjust the automatic voice control</p> <p>9. Lights On/Off
*Press to turn the lights on or off</p> | <p>10. Microphone Volume
*Turn to adjust the volume from the microphones</p> <p>11. Echo
*Turn to adjust the echo</p> <p>12. Repeat
*Press repeatedly to set the current track or entire album to repeat</p> <p>13. CD door</p> |
|--|---|---|

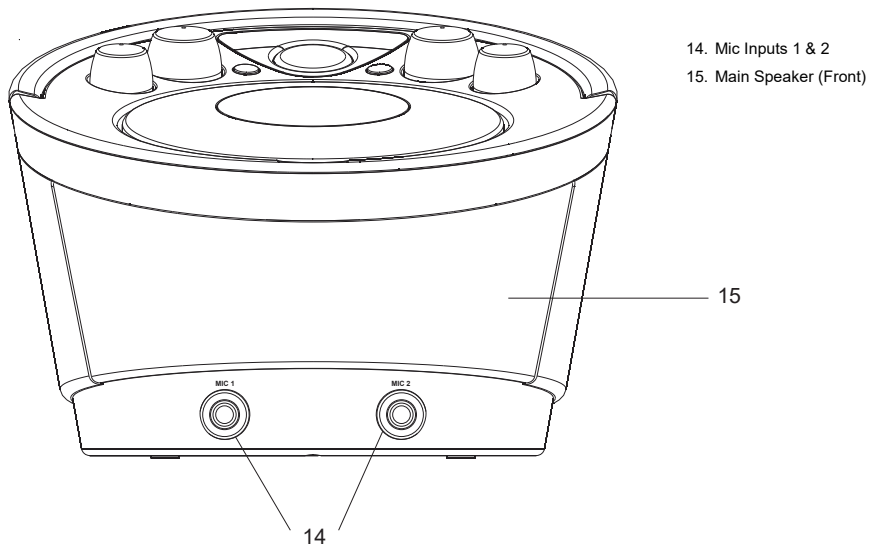 

POWER

Power

 To power the karaoke machine, plug the AC power cord into the AC Power Input on the rear of the unit and a standard power outlet. For battery power, this unit requires 6 C sized batteries (not included).

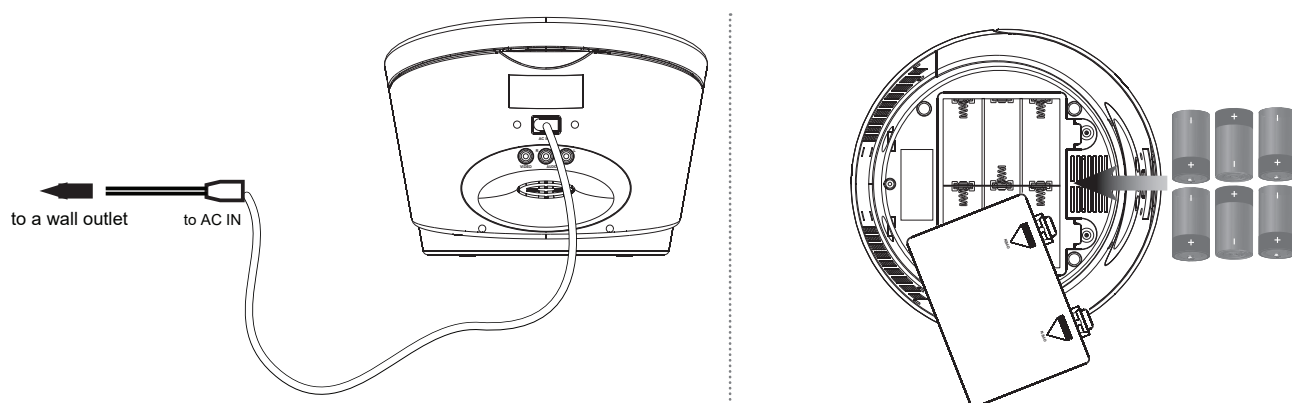

CONNECTING DEVICES

Composite Video Output

 
Requires an RCA video cable (included).

1. Connect an **RCA video cable** to the **RCA Video Output** on the karaoke machine and a video input on a television.
2. Adjust the **television source** to the input used in step one.
3. Content played through the karaoke machine will now be seen on the connected television.

RCA Audio Output

Requires an RCA audio cable (included).

1. Connect **RCA audio cables** to the **RCA Audio Output** on the karaoke machine and an audio input on an external stereo system.
2. Adjust the **external stereo system's source** to the input used in step one.
3. Audio played through the karaoke machine will now be heard through the connected stereo system.

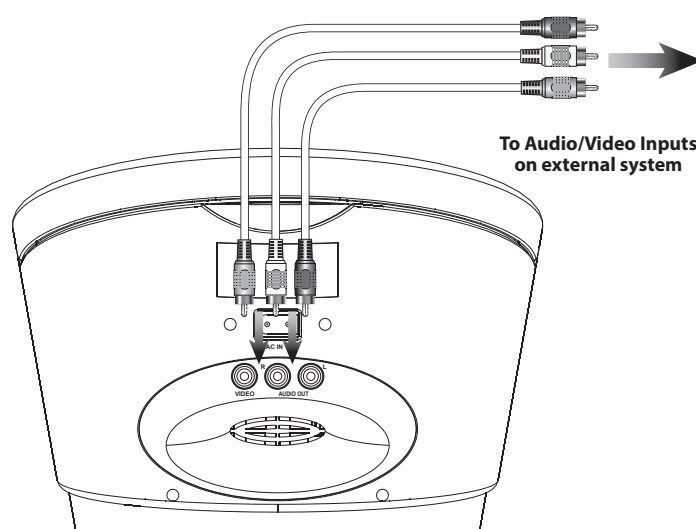

CD & CD+G

Loading a Disc

Note: This unit is not compatible with MP3 CDs.

1. Press the **Power** button to power the unit on.
2. Press **Open** on the CD door to open it.
3. Load a CD, CD-R/RW, or CD+G disc into the karaoke machine, label side facing up.
4. Close the CD door.

Playing a Loaded Disc

1. Plug the included microphone into the **Mic 1** or **Mic 2** inputs.
2. Press the **Play/Pause** button to begin playing the loaded disc.

Programming a Loaded Disc

1. Press the **Stop** button to stop the loaded disc.
2. Press the **Program** button.
3. Press the **Skip/Search** buttons to select a track from the loaded disc.
4. Press the **Program** button to add the selected track to the program.
5. Repeat steps 4 and 5 to program up to 20 tracks to play in a specified order.
6. Press the **Stop** button to cancel a program.

Automatic Voice Control

The Auto Vocal (Automatic Voice Control) dial adjusts the volume of the unit to compensate for varying levels of volume from the microphone. Turn the dial to adjust the degree to which the Automatic Voice Control compensates for variations in volume.

To manually adjust voice control use the Echo knob on the front of the unit.

BLUETOOTH

If the unit has never been paired with a Bluetooth device before, you need to follow the pairing instructions below to link the GV-PS923 with your Bluetooth device

Note: if you can't pair the unit with your Bluetooth enabled device, you can try to turn off & on the power of your unit to solve the problem.

1. Turn the power on
2. Press & Hold Play/Pause/Bluetooth Logo Button seconds to Bluetooth model. Bluetooth indicator lit.
3. Press & Hold the Stop/Pair button for 4-5 seconds. Then the Bluetooth Indicator is flashing, the unit will go into pairing/discoverable mode.
4. Turn on the Bluetooth function of your Bluetooth device and enable the search or scan function to find the unit.
5. Select "GV-PS923" from the device list when it appears on your device screen. if required, enter the pass code 0000 to pair (link) the unit with your device.
6. After successfully pairing (linking) the Bluetooth enable device the Bluetooth indicator steadily and a short beep will be heard.
7. Can be controlled by the Bluetooth device or use the Play/Pause, Stop, forward/remind button on unit (*Fast forward/remind will not work with Bluetooth by unit button)



Environmental Protection

Waste Electrical products should not be disposed of with household waste.

Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice



ENERGY SAVING

For Energy saving, system will return to the standby mode automatically if unit have stopped operating in CD/CDG or BT modes for 10 minutes approximately.



groov»e

Unit J, Braintree Industrial Estate

Braintree Road, Ruislip

Middlesex, HA4 0EJ

www.groov-e.co.uk