


groov»e

GV-SP462 Bluetooth Speaker

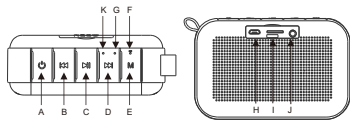

- A ON/OFF BUTTON
B PREV SONG (SHORT PRESS) / VOLUME DOWN (LONG PRESS)
C PLAY / PAUSE (SHORT PRESS) / REDIAL (PRESS TWICE)
D NEXT SONG (SHORT PRESS) / VOLUME UP (LONG PRESS)
E MODE SWITCH
F MIC
G HOLE FOR CHARGING LED INDICATION
H MICRO USB CHARGING PORT
I TF CARD SLOT
J AUX IN PORT
K HOLE FOR MODE EXCHANGE LED INDICATION

Features

1) **⏮** In TF/Bluetooth mode: short press of this button=Next track; long Press = Volume up. In AUX in mode: long press = Volume up.

2) **⏮** In TF/Bluetooth mode short press of this button=Previous track; long press:=Volume down. In AUX in mode: long press = Volume down.

3) **⏸** In TF/AUX IN mode: short press of this button=Play /Pause;
In Bluetooth mode, short press of this button=Play/Pause /Answer/End/Cancel dial/pair; Double click= Last number redial; long press for 2 seconds=reject calls.

4) **⏭** In Bluetooth/TF/AUX mode: Short press of this button to change modes,

Flashing indications

Bluetooth mode:

Bluetooth waiting for pairing, the Blue will flash quickly
Bluetooth paired, Blue led will be constant, and flash slowly whilst playing music

TF card mode: Blue led will flash slowly

Aux in mode: Blue led will flash slowly

Red led flash constant while charging, red led will switch off when fully charged

Bluetooth Pairing

Push **⏭** key to enter Bluetooth mode, the blue LED will keep flashing.

Follow the operating instructions of your Bluetooth device and allow.
It to search in Bluetooth mode, after a few seconds your mobile will discover the Bluetooth speaker under the name **"GV-SP462"**. Select this and your device will confirm this pairing. You can start playing music through the speaker.

Enter password or PIN 0000 on our Bluetooth device (if necessary), and press **"Yes"** or **"Confirm"**.
Important notice: If the connection is successful, the blue LED will keep flash slowly.

Bluetooth Hand-free: Work with the Bluetooth for wireless communication.

TF card mode: Insert the TF card to play music.

Built-in TF smart decoder, you can listen to music stored on your TF card(MP3 format).

AUX mode: Insert the provided 3.5MM audio cable into the speaker; plug the other end (3.5MM Audio jack) into any compatible device (Mobile phone / Mp3 /computer etc.)

Specifications

Bluetooth: BK 4.1
Battery: 3.7V 1200mAh
Charge voltage: 5V 500MA
Loudspeaker size: 40MM 4Ω 3W*2
S/N: $\geq 80\text{dB} \pm 3\text{dB}$
Distortion: $\leq 0.5\%$
Charging time: 2-3 hours
Playback time: 6-8 hour with medium volume
Working range: up to 10m (free space)
Accessories:charging cable*1pc
audio cable *1pc
carabiner*1pc
user manual*1pc

Notice

Do not let children play with the product.
Do not hit the product.
Do not uses in very humid and high temperature environments
Do not throw the product into fire.
Do not block speaker's net above the body of the speaker
Please send to a qualified technician for repair if the product is broken. Do not disassemble it by yourself.
The warranty is void if the product has evidence of metal fatigue or rust.

Battery Removal/Disposal

Your product contains batteries which cannot be disposed with normal household waste. Doing so may harm the environment. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health. Should your product develop a fault and your battery needs replacing PLEASE DO NOT REMOVE THE BATTERY – please contact us at info@groov-e.co.uk for instructions of how to return to us for service.

GROOV-E 1 year warranty from date of purchase.



Environmental Protection
Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GROOV-E
Unit J
Brintree Industrial Estate
Brintree Road
Ruislip
Middlesex HA4 0EJ
England (UK)

www.groov-e.co.uk