

groov▶▶e

Motion



GV-SW02
Smart Watch

 **Bluetooth**[®]
groov-e.co.uk



30 Day Right To Return

We do not envisage any problems occurring with your groov-e GV-SW02 Motion Smart Watch. However, for your peace of mind, should any fault occur, please return it within 30 days to your retailer with proof of purchase for an exchange or refund.



12 Month Guarantee

This product is guaranteed for twelve months. Please retain your receipt as this will be required as proof of purchase in the event that the device does not perform as expected then please contact your original point of purchase, should you require further assistance then please contact us.



Extended Warranty

Please register your product within 30 days from date of purchase www.groov-e.co.uk/warranty. Proof of purchase required.



Contact Us

Reach out to us at info@groov-e.co.uk or visit www.groov-e.co.uk

"Congratulations on your purchase and Thank You for choosing the groov-e GV-SW02 Motion Smart Watch."



IMPORTANT SAFETY INFORMATION



Please read this important information carefully before you use the Motion Smart Watch and save it for future reference.

- Do not self-diagnose and treat according to the measurements taken by this product. The Smart Watch measurement results are for reference only and are not intended for any medical use or basis. Please follow your Doctor's instructions.***
- Only use the charging cradle and cable supplied to charge your Smart Watch.***
- This product has an integral rechargeable battery and should not be disposed of in the normal household waste but taken to an appropriate recycling facility, where and when these are available.***
- Never throw batteries in a fire or attempt to open the outer casing.***
- This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.***
- Do not leave it in low temperatures as moisture can form inside the product, which may affect the product circuitry.***
- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.***


OVERVIEW

IN THE BOX

- 1 x Motion Smart Watch
- 1 x Wrist strap
- 1 x USB cable with charge cradle
- 1 x User Manual

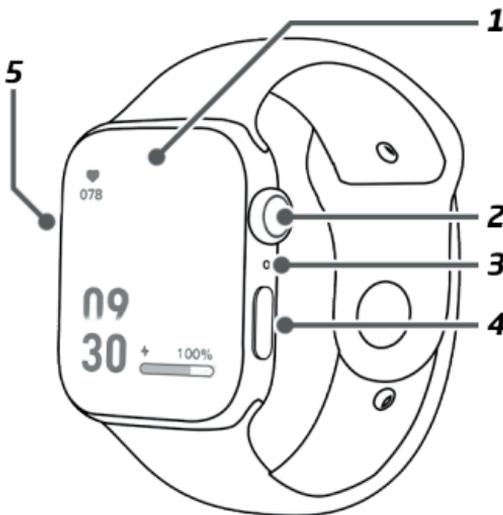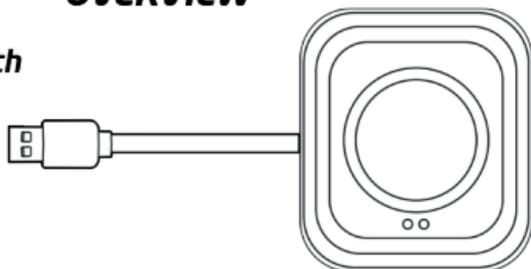

1. Touch screen display
2. Power On/Off
 - Long press for 3 seconds
 - Short press to switch between the Watch and Option display
 - Rotate to display further Watch face options
3. Microphone

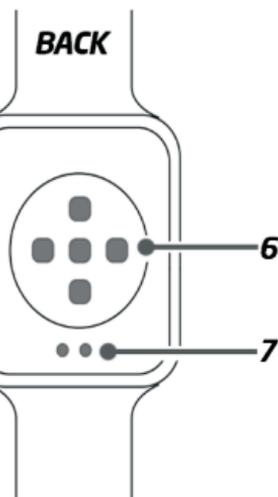


4. Display On/Off
 - Short press to turn the display on/off
5. Speaker
6. Heart rate/Blood Oxygen/Blood Pressure sensors
7. Charging connectors

OPERATION

Charge the integral battery

- 1. Your Smart Watch has an integral rechargeable battery. Before you use your Watch for the first time, you will need to charge the battery for a minimum of 2 hours.*
- 2. Press the Watch into the charging cradle provided, checking that the Watch and the Cradle are the correct way around and that the charging connectors on the back of the Watch will align with the two charging pins in the charging cradle. Plug the USB-A end of the charging cable into a computer or other USB charging device.*

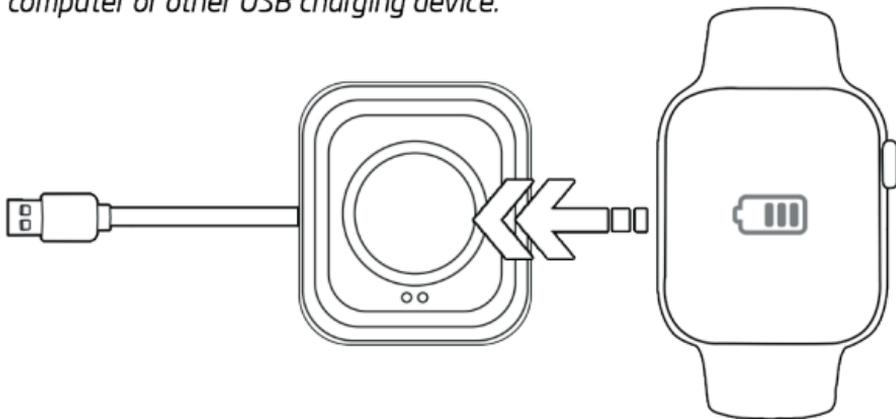

- 3. The Watch display will turn on and a battery symbol and 'Charging...' will be displayed.*
- 4. When the battery is fully charged 'Charging complete' will be displayed. Short press the Display On/Off button to turn on the display and check the status.*

OPERATION

Download and Install the Lefun Health App

1. Using your Smartphone, Download and install the Lefun Health App. from the iOS App store or from the Google Play Store. Search for 'Lefun Health' or scan the QR code to download the App.



Supports iOS 9.0 and above, Android 5.0 and above, Bluetooth Version 4.0.

Pair your Smart Watch to your Smartphone

1. On your Smartphone turn on Bluetooth and open the Lefun Health App.

Note: Please do not pair your watch using the Bluetooth settings on your phone. Your watch has been designed to work together with the Lefun Health App.

2. At the top of the App screen, tap on the + and tap Add. Follow the instructions on the App, adding your email address and verification code. Tap + again and then tap Add.

3. The App will scan for devices and when found, your smart watch will be displayed as GV-SW02. Tap on connect, followed by 'Allow' and 'Pair' and then 'Finish'.

4. Within the Lefun App., enable notification permissions, so that your message notifications (Facebook, SMS, WhatsApp etc.) can be received and viewed on your Smart Watch.


5. Health and sports data from your watch will sync automatically with the Lefun Health App.

Note: Please reconnect the Lefun App to your Watch if it has been disconnected for more than 5 minutes.

OPERATION

Wearing your Smart Watch

The sensors on the back of the watch need to be in contact with your skin to be able to report the readings for your Heart Rate, Blood Oxygen and Blood Pressure. Please wear your watch with a suitable tightness on your lower arm, above your wrist.

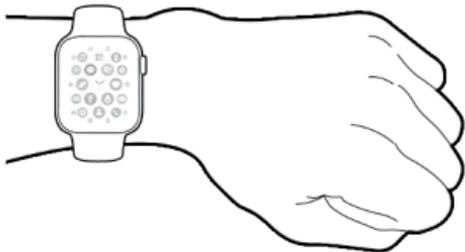

Note: Do not self-diagnose and treat according to the measurements taken by this product. The Smart Watch measurement results are for reference only and are not intended for any medical use or basis. Please follow your Doctor's instructions.

Controlling your Smart Watch Display


Button 1: Power On/Off

- Long press for 3 seconds
- Short press to switch between the Watch and Option display
- Rotate to display further Watch face options.

Button 2: Display On/Off & Back

- Short press to turn the display on/off or go back to the Watch display.

Note: To extend the screen time, go to settings, select light time and choose from the time options available (5s/7s/10s etc)

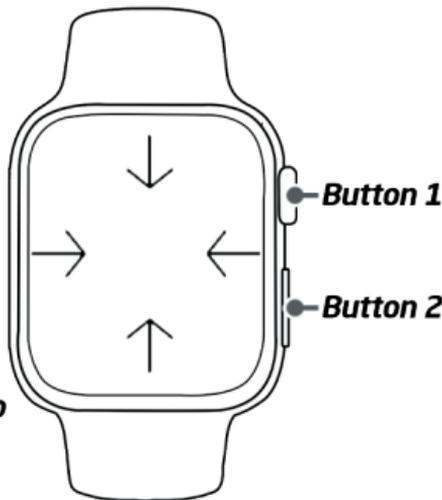

OPERATION


When the watch is displayed:
Swipe up to display mobile notifications.
Swipe down to go to the shortcut menu:

Tap  to open the bluetooth call function
Tap  to find and ring your phone.
Tap  to display the Lefun Health App.
QR code. Scan the code to download the App.
Tap  to change how the Watch displays the different Options to you. You can choose from List/Rotate/4 Grid/9 Grid and Honeycomb.
Tap  to change the Watch display brightness.
Tap  to go to your Phone's voice assistant, such as Siri or Bixby.
Swipe left to display the Pedometer/Heart Rate/Blood Pressure/Blood Oxygen/Sleep Monitor and Weather screens.



Accessing and Using the Smart Watch Options

With your Watch Powered On, double press **Button 1** to access the Watch Options (Single press if the Watch is displayed). Tap each icon to open/start and swipe right on the watch face to exit.

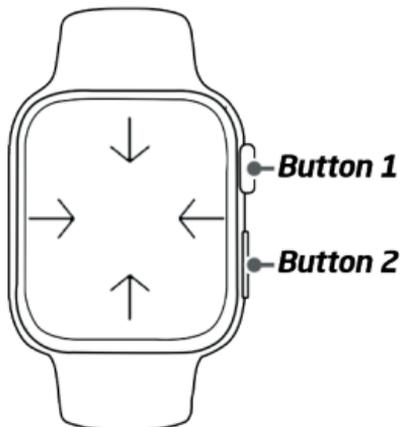

OPERATION

With some of the features a Bluetooth connection to your mobile phone via the Lefun Health App., is essential for them to function and this is indicated in the list below.

	Pedometer		The Watch will start to log your daily steps, calories burned and distance. If connected to the Lefun App., daily data is logged. Swipe right to exit.
	Heart Rate		The watch will start to record your heart rate.
	Blood Oxygen		The watch will start to record your blood oxygen level.
	Blood pressure		The watch will take a blood pressure reading.
	Sport		There are several options of Brisk Walk/Run/Cycling/Jump/Basketball/Badminton and Ping Pong. Make a selection to record the mode time, calories burned, heart rate etc.
	Phonebook		Using the bluetooth connection you can sync and access contacts from your mobile phone.
	Call log		Using the bluetooth connection you can check the call records on your mobile phone.
	Dialer		Using the Bluetooth connection to your mobile, you can use the keypad on your Watch to make phone calls. Note: When you use the call/receive function, you will need to pair your Watch to your smartphone. Open settings on your smartphone, go to Bluetooth and connect to GV-Sw02.
	Sleep		The watch will start to record your deep and light sleep patterns as well as total sleep time.
	Message		Using the bluetooth connection to your mobile if you have enabled message notifications within the Lefun App, you can check and sync. your messages.

OPERATION

 Style		Change how the Watch displays the different options to you. You can choose from List/Rotate/4 Grid/9 Grid and Honeycomb.
 Find phone		After you have connected your watch to your mobile using bluetooth, you can use your watch to help you to find your phone. Your phone will begin to ring when it has been located. Swipe right on the watch face to exit/stop the ringing.
 Capture		After you have connected your watch to your mobile using Bluetooth, via the Lefun Health App, you can use your watch to remotely take photos with your phone. Open the Lefun Health App. first and set up your phone so that it is pointing at what you would like to take a photo of. Next, on your watch, tap the Capture icon. The App. on your phone will change to the Taking pictures screen. Shake your watch to take the photo with your phone. Your watch will vibrate to confirm that a photo has been taken and your photos will be stored on your phone as usual. Swipe right on the watch to exit the capture option.
 Music		After you have connected your watch to your mobile using Bluetooth via the Lefun Health App, you can use your watch to control a music player App. on your phone and listen to music on your watch. Options of Play/Pause, Skip Back and Skip Forward are available. Open the music player App. on your phone and make your music selection. On the watch, tap play to start the music. Tap pause and swipe right on the watch to exit.
 Stopwatch		Opens the stopwatch function.
 Weather		After you have connected your watch to your mobile using Bluetooth, your watch will display the current time and weather conditions.
 QR code		Displays the Lefun Health App. QR code. Scan the code to download the App.
 Settings		Access and change the settings for Language display/Password/Display brightness/Bluetooth/Light timeout/Bedside light/Vibration alert/About software version and MAC address/Watch reset/Power off.

TROUBLESHOOTING

Cannot connect to my Mobile phone using Bluetooth

- Check that your mobile phone supports iOS 9.0 or Android 4.4 or above with Bluetooth V4.0 or above.
- Have you downloaded the Lefun Health App. ? Download, install and Open the App.
- Only try to connect to your watch using Bluetooth via the Lefun Health App. Your watch has been designed to work together with the Lefun Health App.
- Ensure that the Watch and Mobile phone are both powered on and in range for Bluetooth connectivity, which is 10 meters or less (33 feet or less).
- Move the Watch and Mobile away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.
- Power your mobile phone and the Watch off and power them on again, then try again to connect using Bluetooth.

My Watch data has not synchronized with the Lefun Health App.

- Check that your mobile phone supports iOS 9.0 or Android 4.4 or above with Bluetooth V4.0 or above.
- Check that your Watch and Mobile phone have successfully connected using Bluetooth via the Lefun Health App. Note that about one week of data can be stored by the Watch and then the earliest data will start to be overwritten. Please check that you have synced your Watch to your mobile phone in good time.

Unable to charge my Watch

- Check that the Watch and the Cradle are the correct way around and that the charging connectors on the back of the Watch align with the two charging pins in the charging cradle.
- Check that the computer or other charging device are switched on.
- If the Watch battery power is very low, it will take approximately 3-5 minutes to enter the charging state. Please wait and then check the display again.

The touch screen response is slow

- Please do not use a screen protector or wear gloves whilst using your watch.
- The touch screen may malfunction in humid conditions or when exposed to water.
- Do not touch the screen with sharp objects or just your fingertip.
- Clean the touch screen with a soft cloth and power your watch off and on again.

FEATURES

- **Heart rate, blood pressure & blood oxygen monitoring**
- **Sports modes: brisk walk, run, cycling, jump, basketball, Badminton, pingpong.**
- **Track daily activities: steps, distance, calories**
- **Sleep monitor: Deep sleep, light sleep, sleep duration, sleep quality**
- **Fitness targets and goals setting**
- **Water resistance protection - IPX4, splashproof**
- **Sedentary reminder/ Call reminder/ Alarm reminder/Drinking reminder**
- **Message alert: supports SMS, Facebook, Whatsapp, Instagram, Twitter, LinkedIn**
- **Plus additional functions including Camera control, Music control, Bluetooth dial, call log, weather, Stopwatch, power saving mode**

Battery Removal/Disposal

This product contains batteries and should not be treated as normal household waste and should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit www.recycle-more.co.uk.

Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.

Never throw batteries into a fire or attempt to open the outer casing. Should your product develop a fault and your battery needs replacing for further advice on how to safely remove your battery please visit our website at www.groov-e.co.uk

SPECIFICATIONS

Screen: 1.68" TFT, full touch screen

Battery: 190mAh Lithium Polymer Battery

Charging time: 1.5-2 hours

Standby time: up to 5 days

Waterproof rating: IPX4, splashproof

Watch strap length: 243mm

Watch strap width: 24mm

Weight: 44g (including strap)

Compatibility: iOS 9.0 or above / Android 4.4 or above

Pairing name: GV-SW02

Please search and download "LEFUN HEALTH" from the iOS App Store or Google Play Store

Environment Protection

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



GUARANTEE

Subject to the conditions stated below, groov-e guarantees this equipment against defects in workmanship or materials of its mechanical and electronic component parts (excluding styling, battery cells, magnetic tapes, re-chargeable batteries, user removeable memory devices, with the exception where the battery is inbuilt into the product) for a period of one year from the date of purchase. This product will be repaired or if necessary replaced free of charge if it has been proven to be defective within the one year warranty period.

1) Claims under this guarantee should be made through the authorised dealer/retailer from whom the equipment was purchased. If this is not possible, please contact groov-e directly.

2) This guarantee is only valid when the equipment is purchased and retained within the United Kingdom and a valid proof of purchase has been provided.

3) This Guarantee Excludes:

(i) All damage caused through accident, misuse, wear and tear, neglect, installation and/or use in a manner inconsistent with technical and safety standards.

(ii) Alterations or adjustments made to equipment

(iii) Loss of data resultant from malfunction of hard drive or other storage device

(iv) Damage caused to any third party device as a result of using the product.

4) No liability under this guarantee shall be incurred:

(i) In respect of damage or loss occurring during transit to or from the purchaser

(ii) Where the serial number plate of the equipment has been removed or altered in any way.

5) groov-e shall not be liable for consequential damage, loss or injury arising from or in connection with the equipment, excepting only that nothing in this condition shall or shall be construed so as to exclude or restrict liability for negligence.

6) The cost of carriage to and from groov-e shall be borne by the purchaser.

7) This guarantee is personal to the original purchaser and is not transferable.

8) If the equipment, in respect of which a claim hereunder is made, is found on examination to comply with the published specifications, a test fee may be incurred.

This guarantee is in addition to and does not in any way affect any statutory or other right of consumer purchasers, including those rights in relation to sections 13 to 15 of the Sale of Goods Act 1979, the Sale and Supply of Goods to Consumer Regulations 2002, The Consumer Rights Act 2015 or the Sale of Goods and Supply of Services Act 1980 (for ROI).

groov-e

Unit J

Braintree Road

Braintree Industrial Estate

Ruislip

Middlesex

HA4 0EJ

Authorised EU Representative

Rashmian EU Ltd

Robwyn House

Suite 3E

Corrintra

Castleblayney

Co. Monaghan

Ireland

www.groov-e.co.uk

Email: info@groov-e.co.uk

Telephone: 020 8839 0978

Register your purchase for extended warranty

www.groov-e.co.uk/warranty